

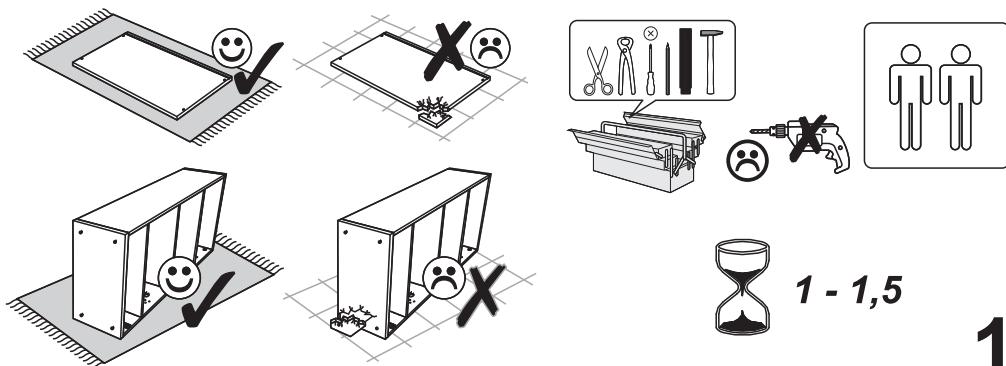


TODI ŁÓŻKO

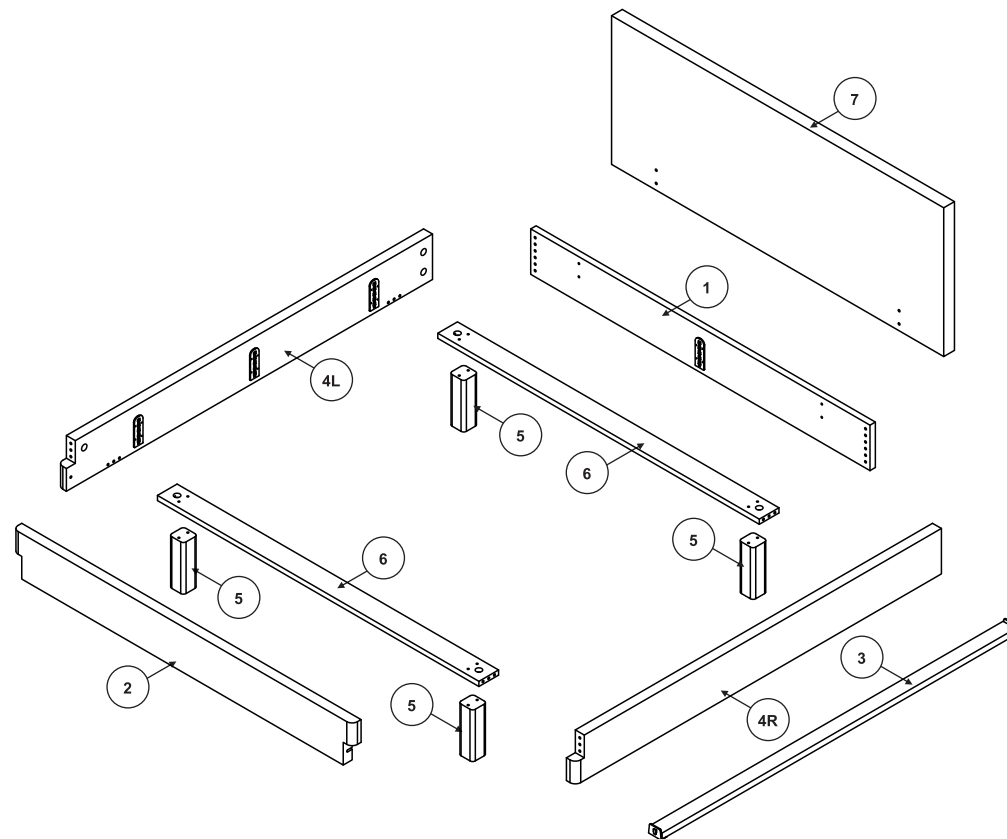

- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |

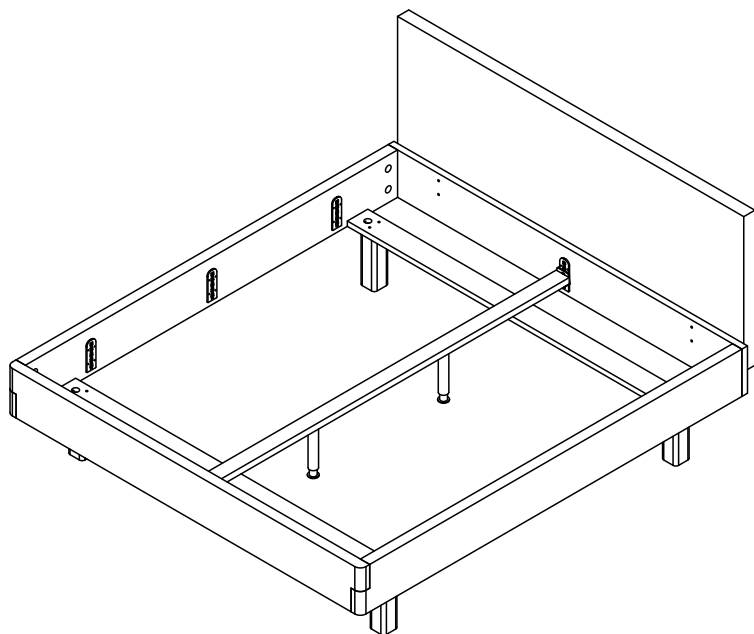


AC 8x50 x20	NA 3x16 x8	NB 5x60 x12	W 4mm x1
XI x12	XL M8 x12	XS M8x80 x12	MA x2
			MB x2




- AC 8x50 x12
- XS M8x80 x12

3

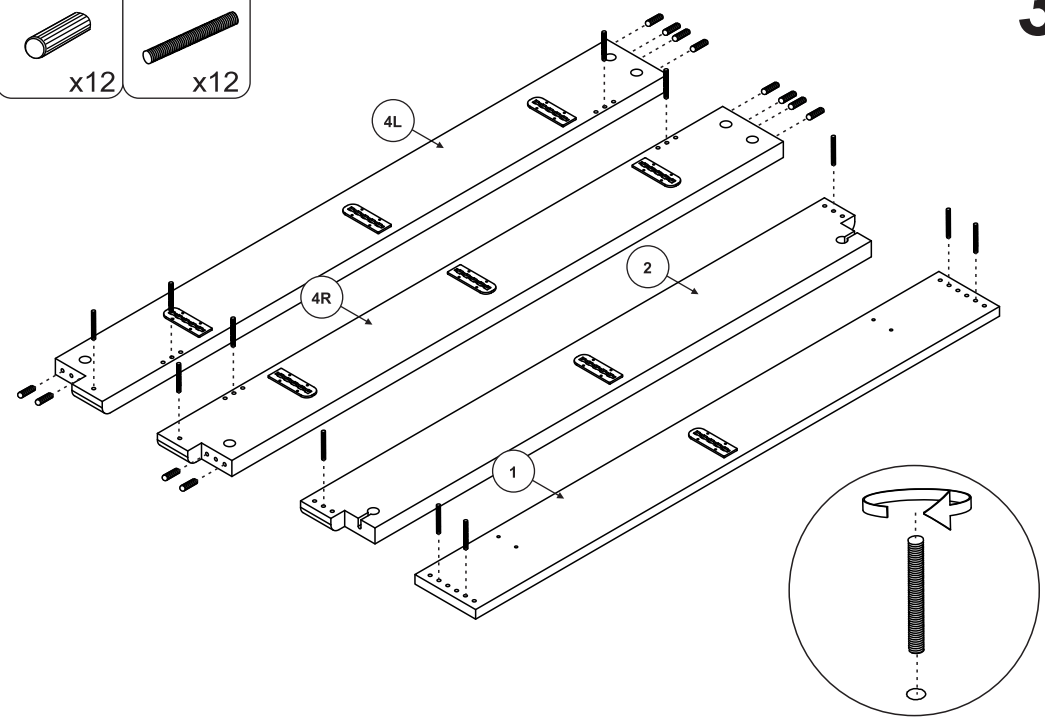


- XI x4
- XL M8 x4

5

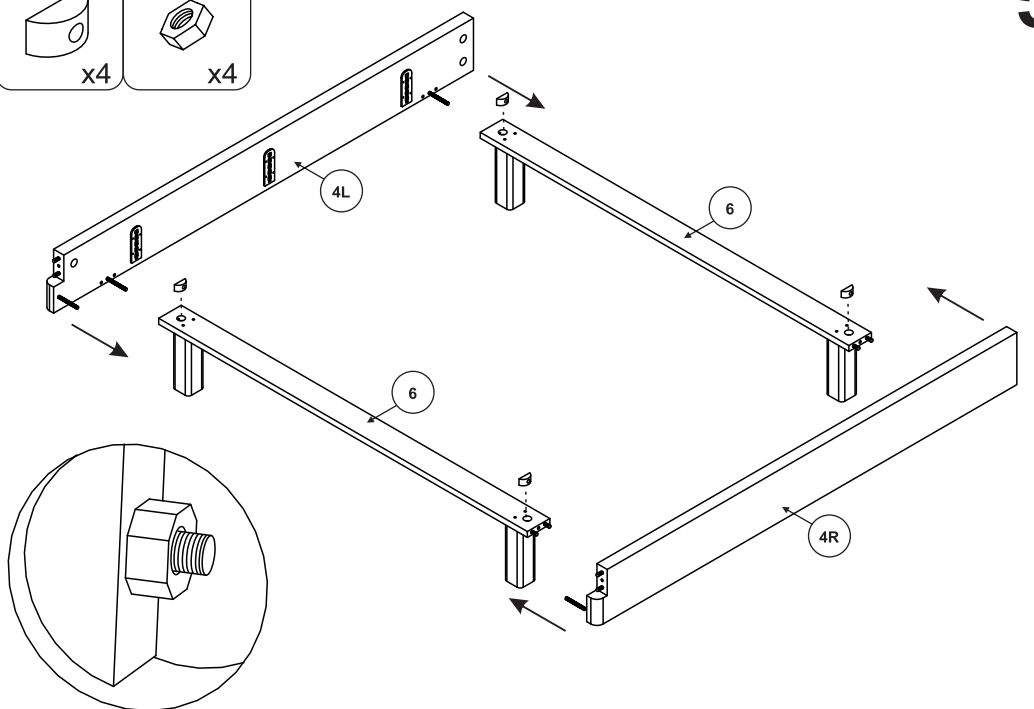


- AC 8x50 x8
- NB 5x60 x8
- W 4mm x1

4

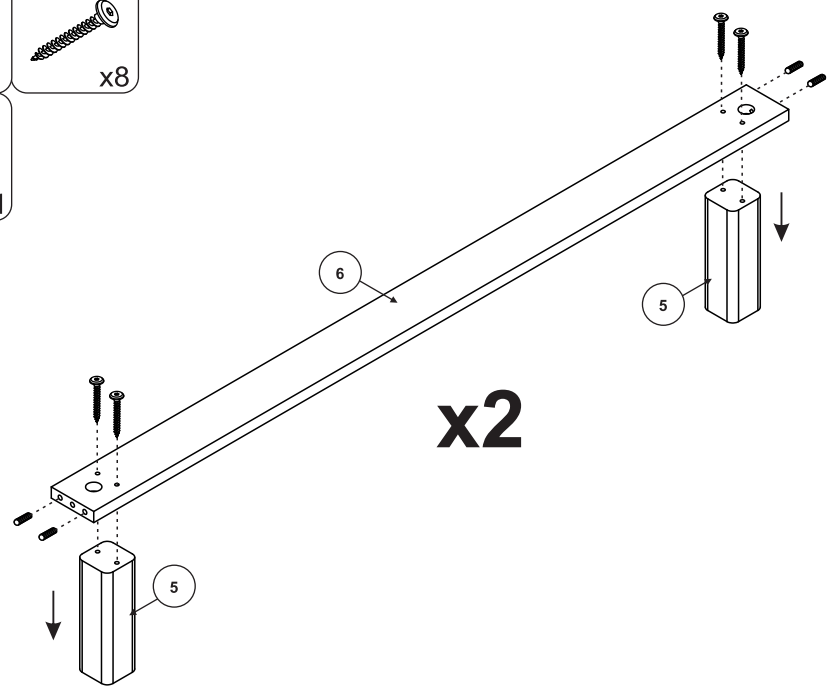


- XI x8
- XL M8 x8

6

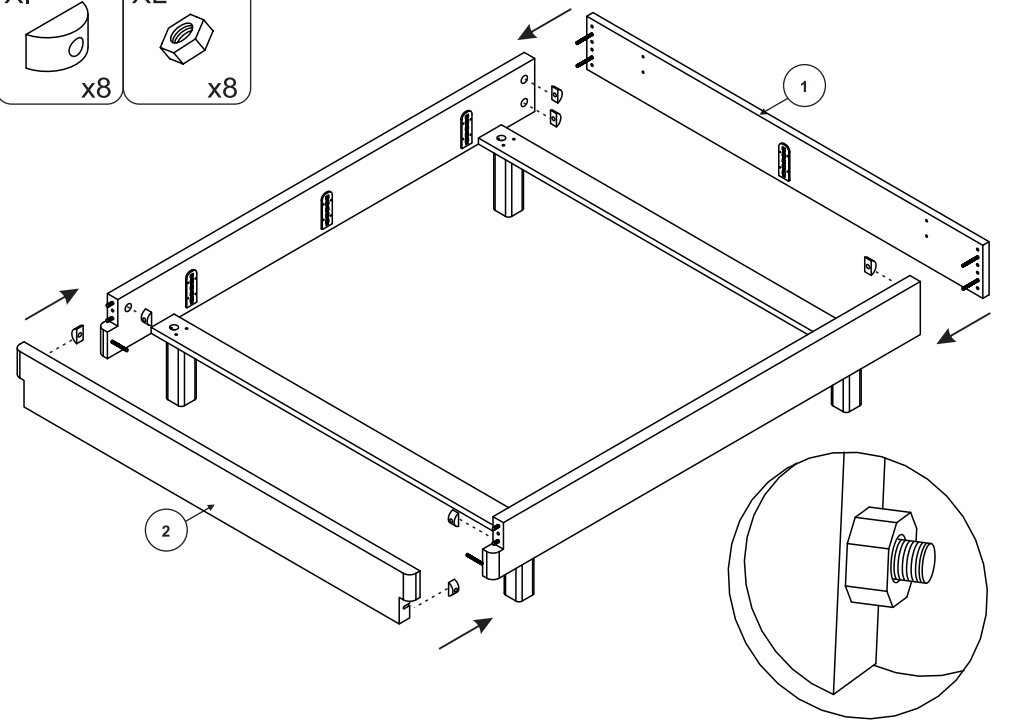




- NB 5x60 x4
- W 4mm x1

7

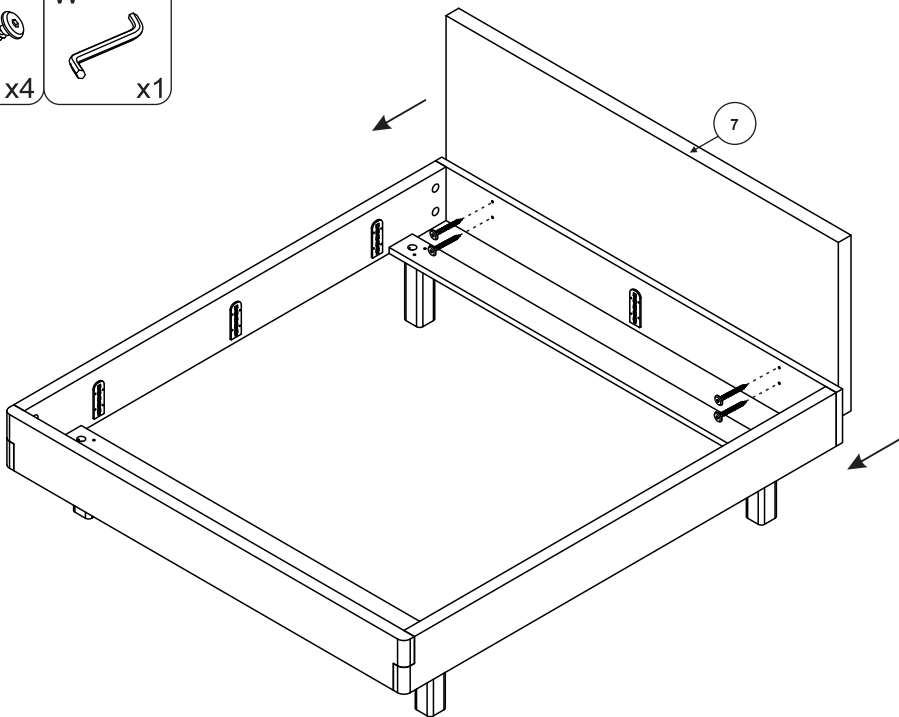

- MA x2
- MB x2
- NA 3x16 x8

8

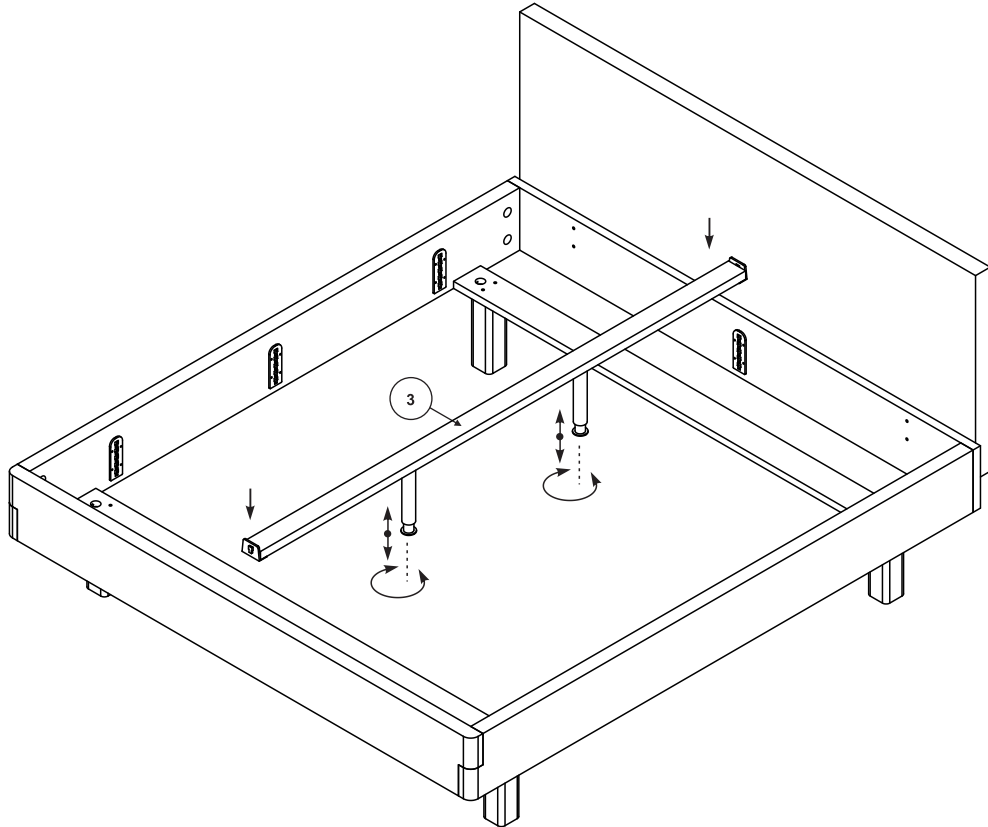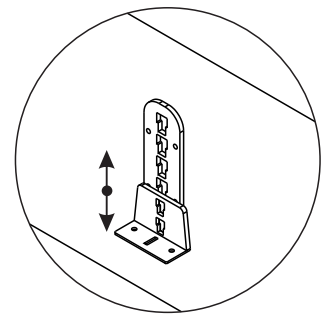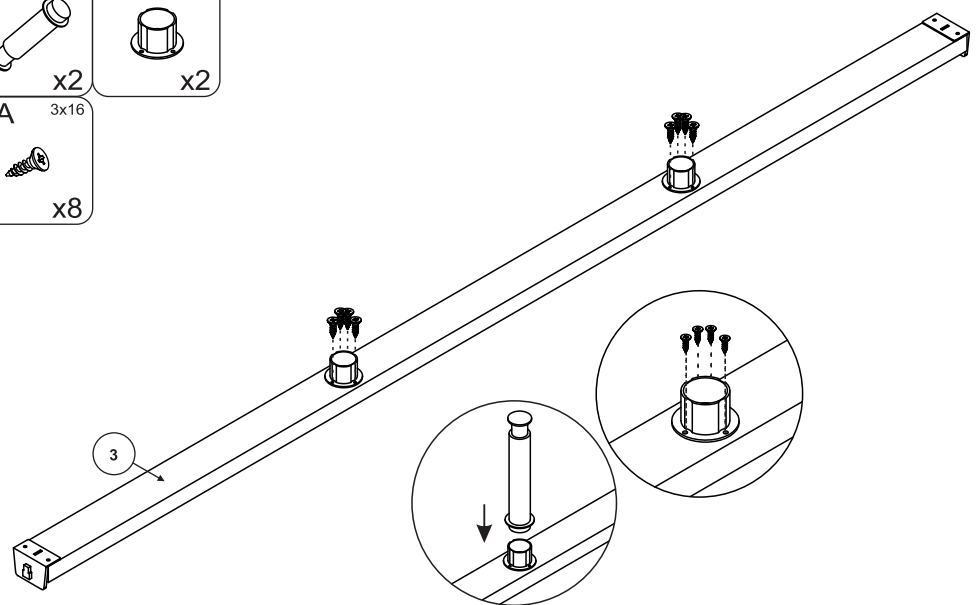

9