

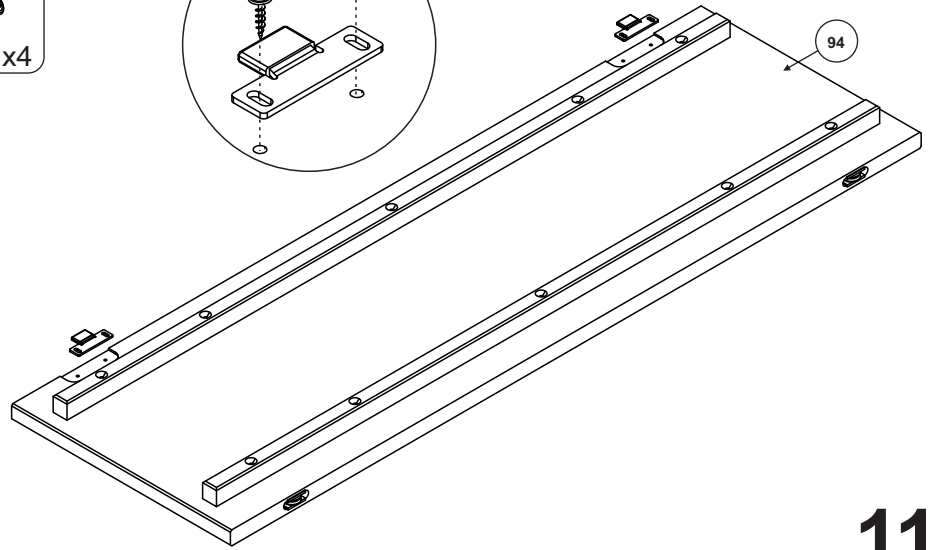
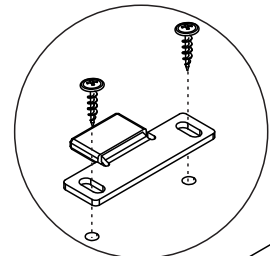
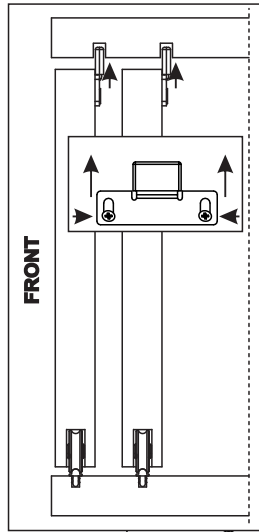



- L  x2
- NO 3,5x15  x4



11



FRONT

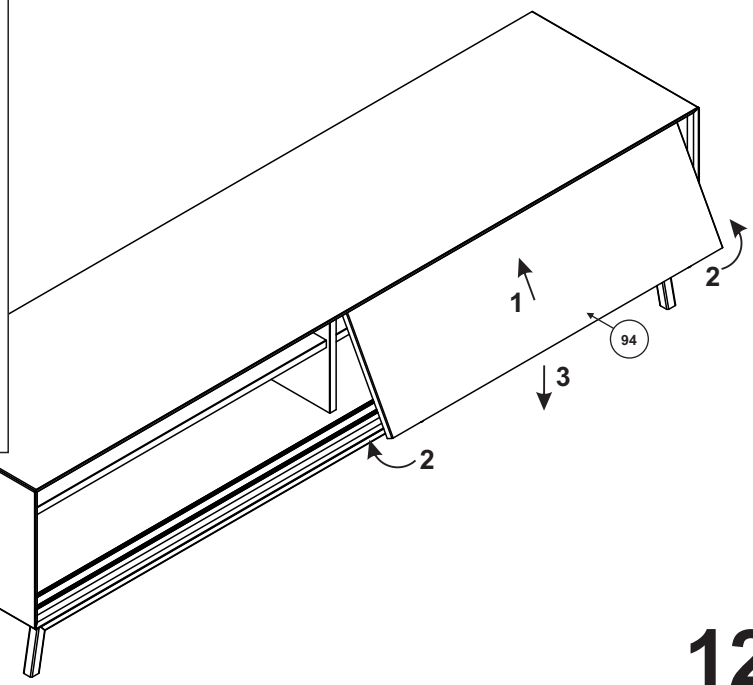

12




MODERN LOFT

SZAFKA RTV 200 ZAMKNIĘTA - KORPUS PLMOL07K




- (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimatı
- (GB) Assembly instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

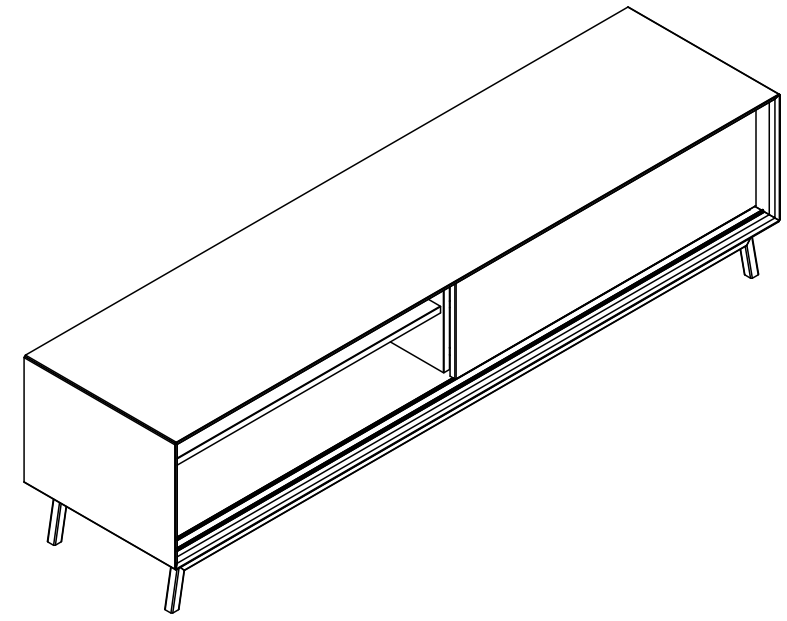


30.08.2022



1

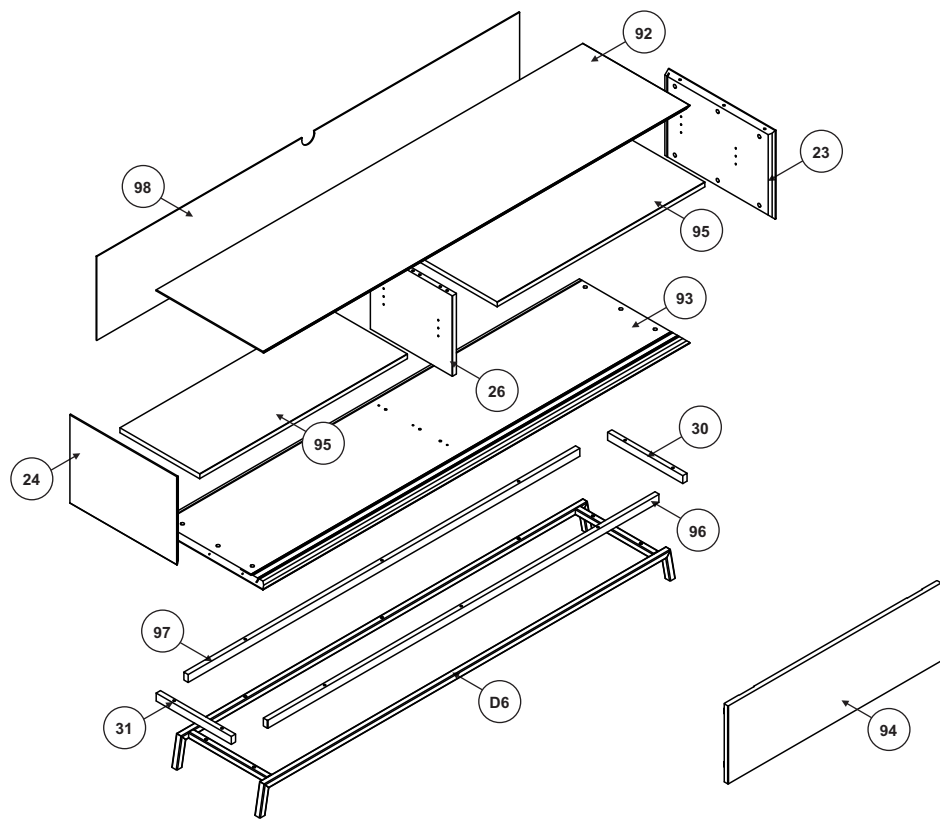

A 8x35 x6	MC x12	L x2	NS 3x20 x4	Y 5mm x8	WD 5mm x1
BF x12	C 15x10 x30	NO 3,5x15 x4	WC 4mm x1	YM M6x45 x10	BC 34mm x6




2

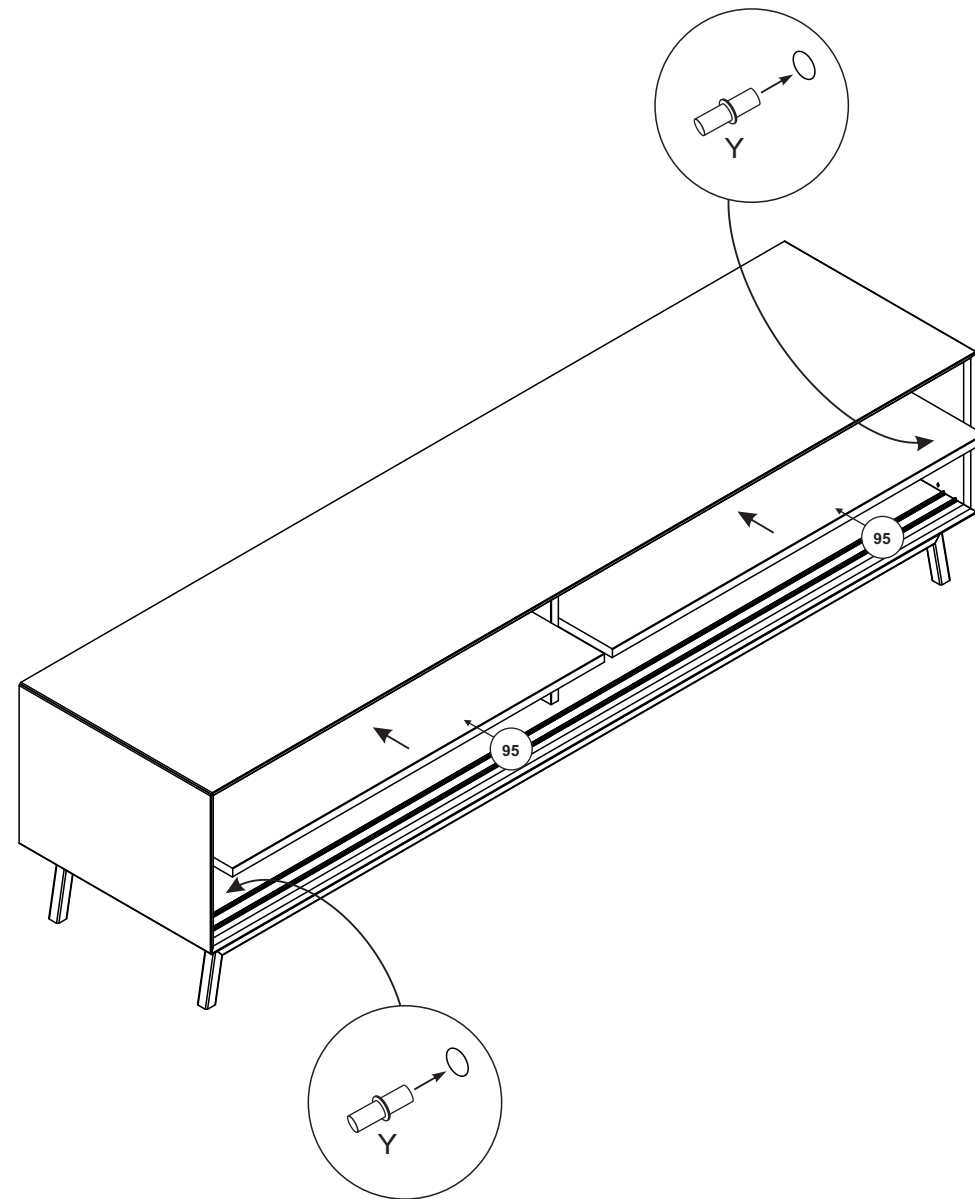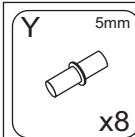



10

YM M6x45
x3




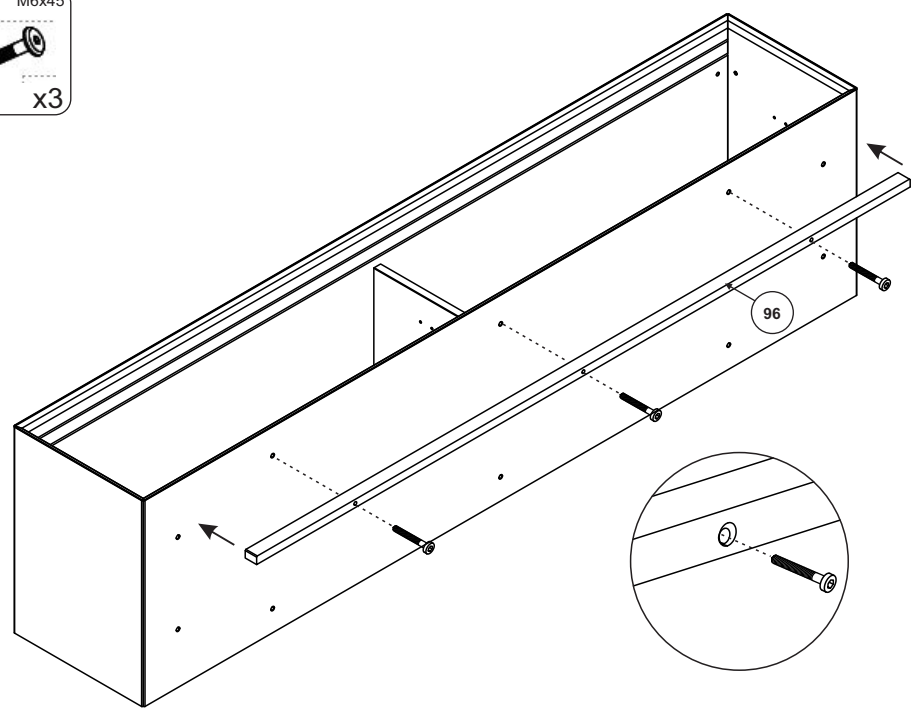


8




YM M6x45
x7

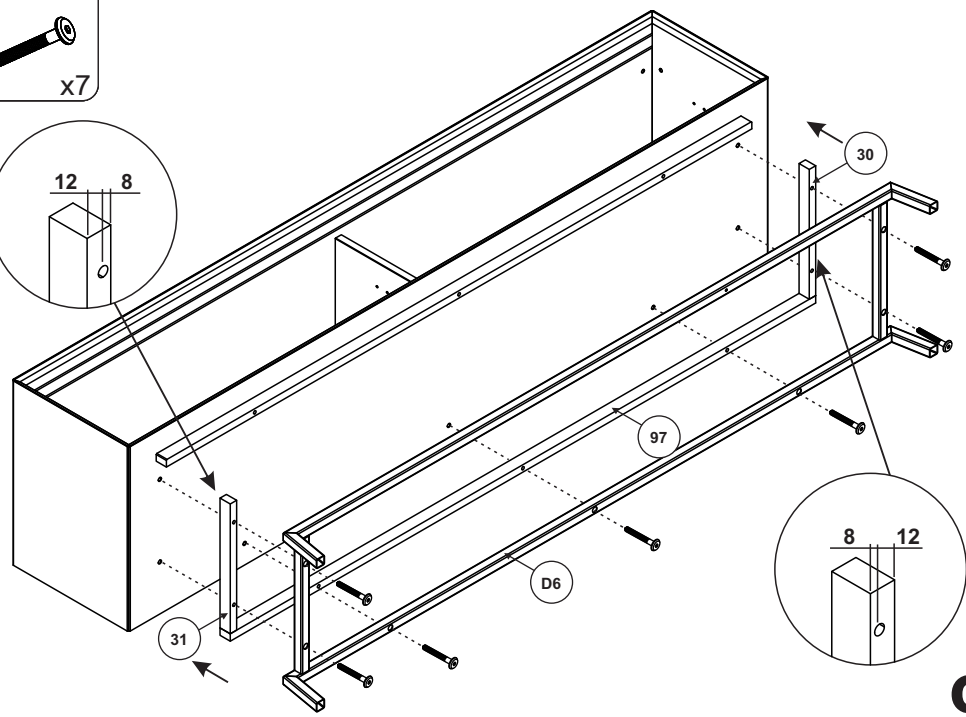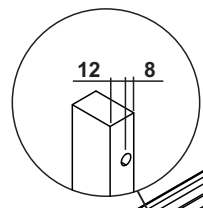


9

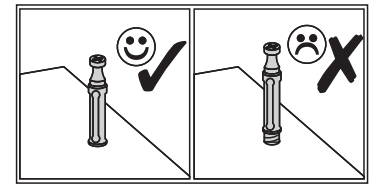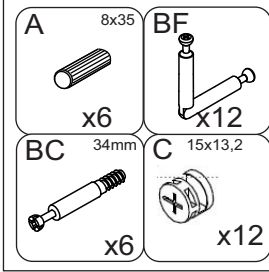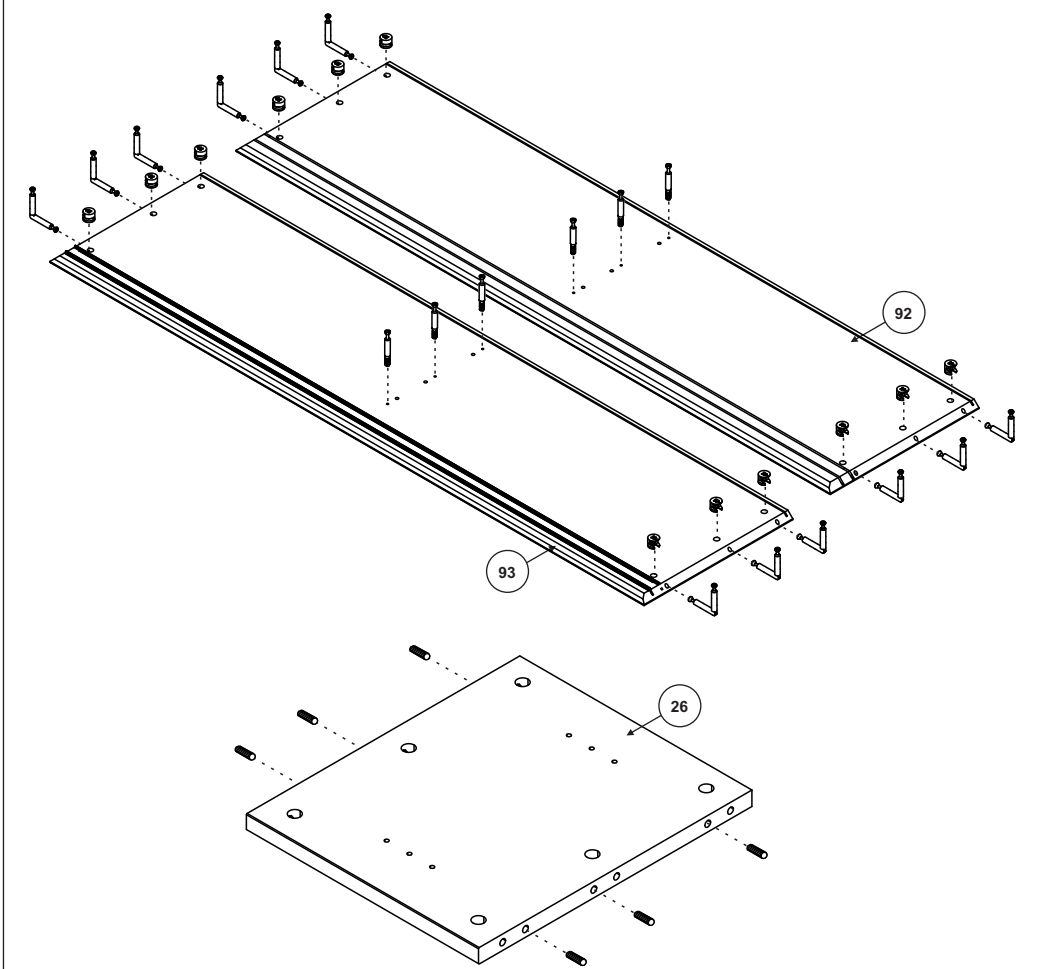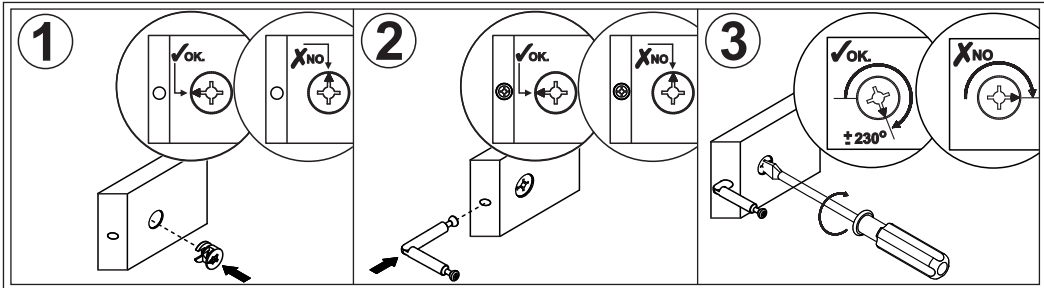



3

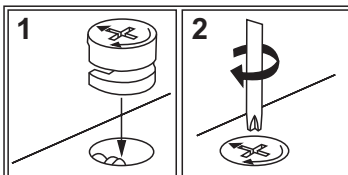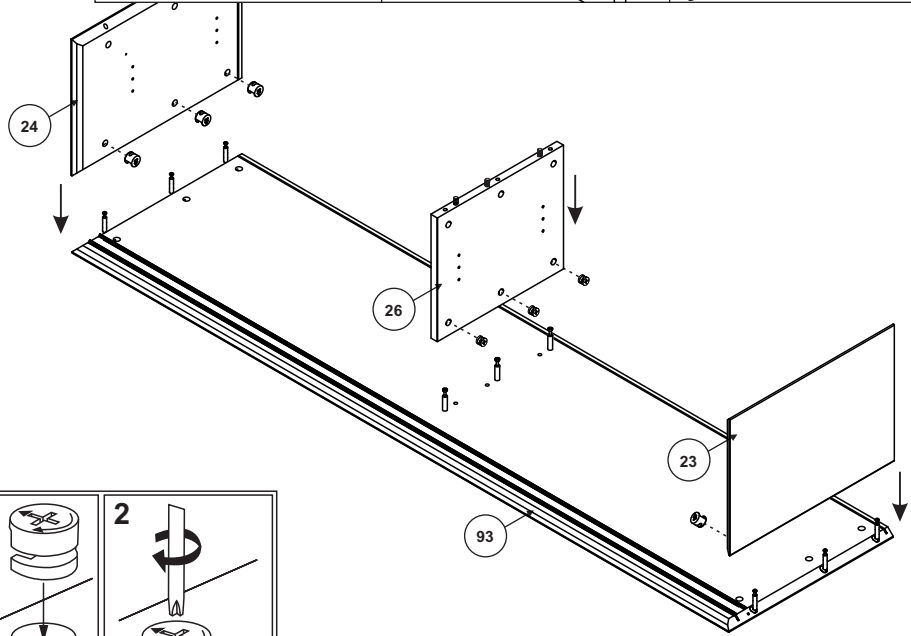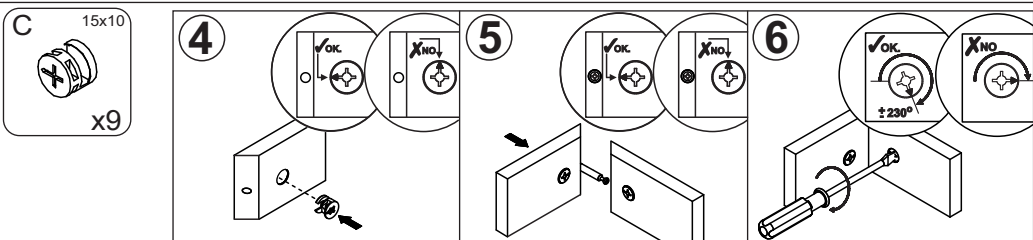


4

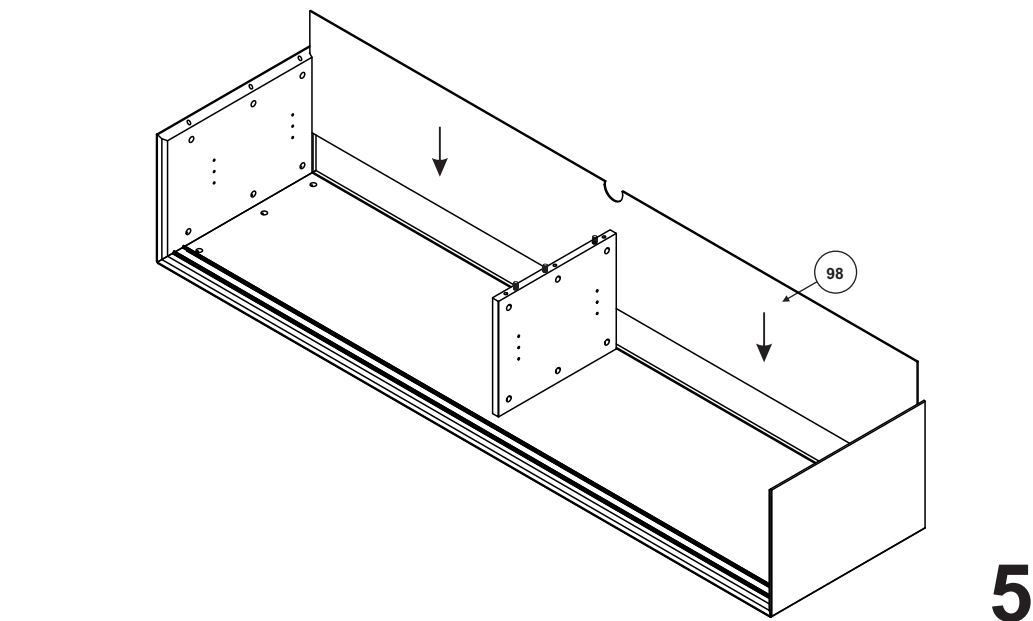






5

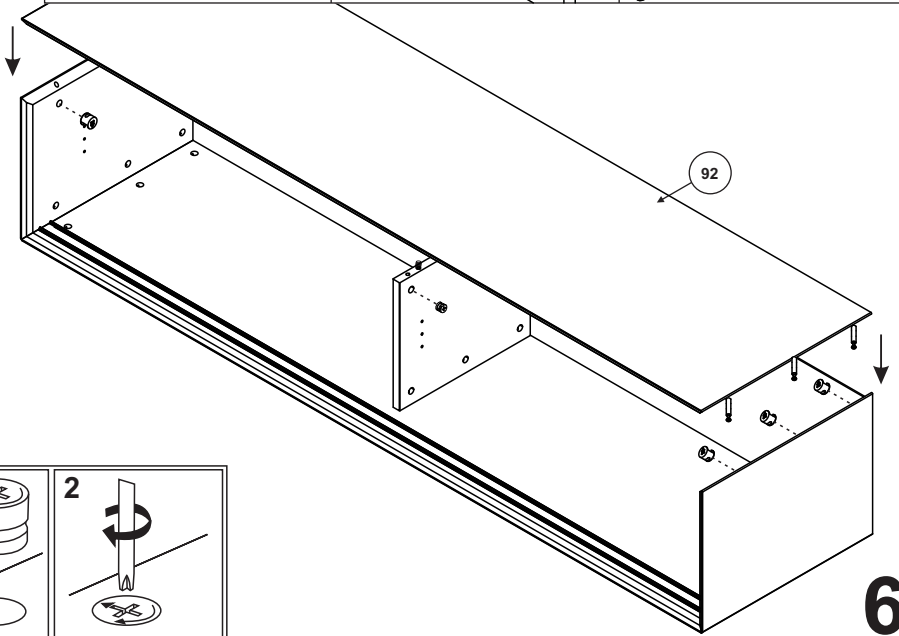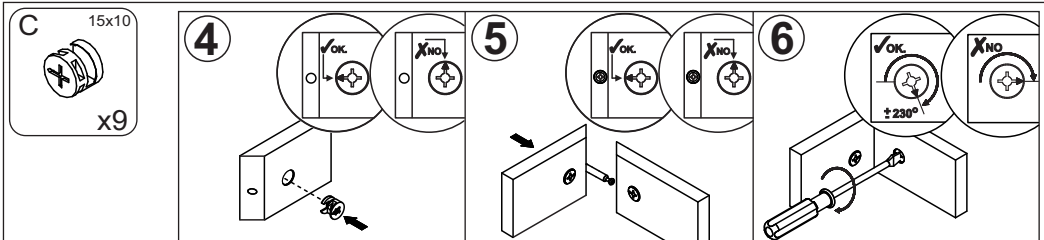

6

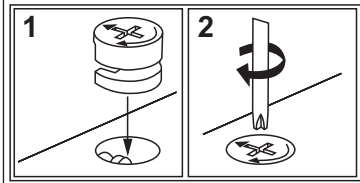

7

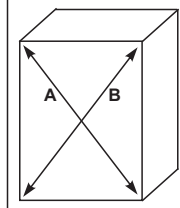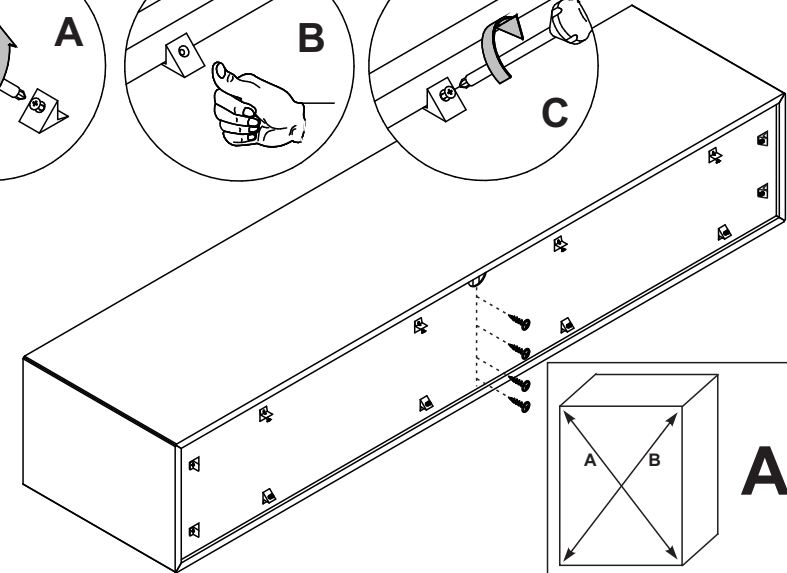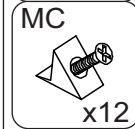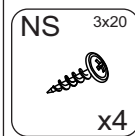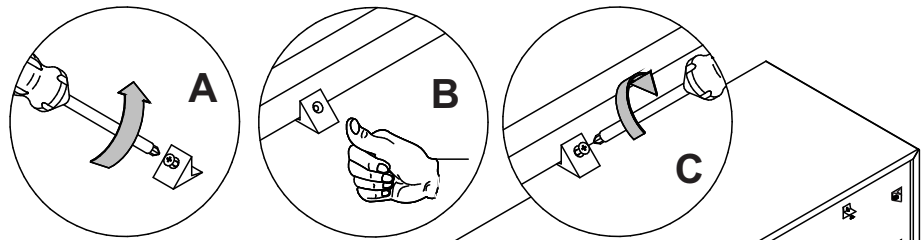

A=B