


KATMANDU
MEBLE


MARONE ELITE
KOMODA 3.3
PLMEL 42

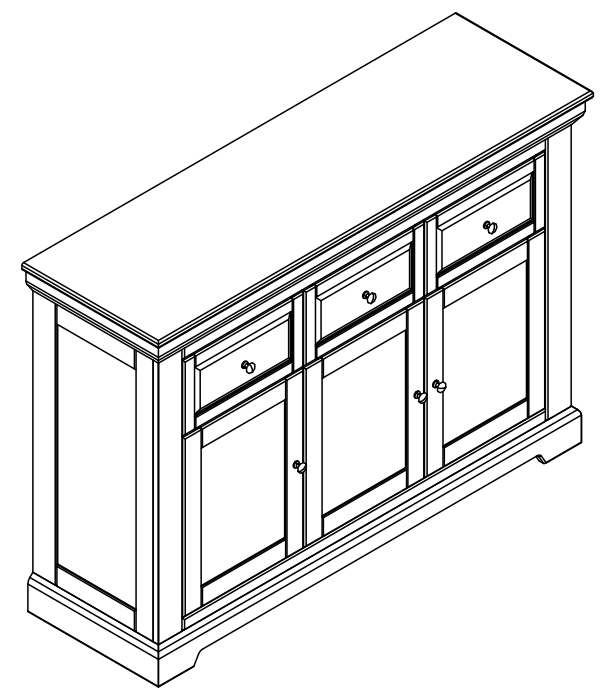


- (D) Montageanleitung
- (GB) Assembly instructions
- (FR) Notice de montage
- (IT) Istruzioni di montaggio
- (NL) Handleiding voor de montage
- (PL) Instrukcja montażu
- (CZ) Montážní návod
- (SK) Návod na montáž
- (HU) Szerelési útmutató
- (RO) Instrucțiuni de montaj
- (TR) Montaj talimatı
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ





15.09.2022



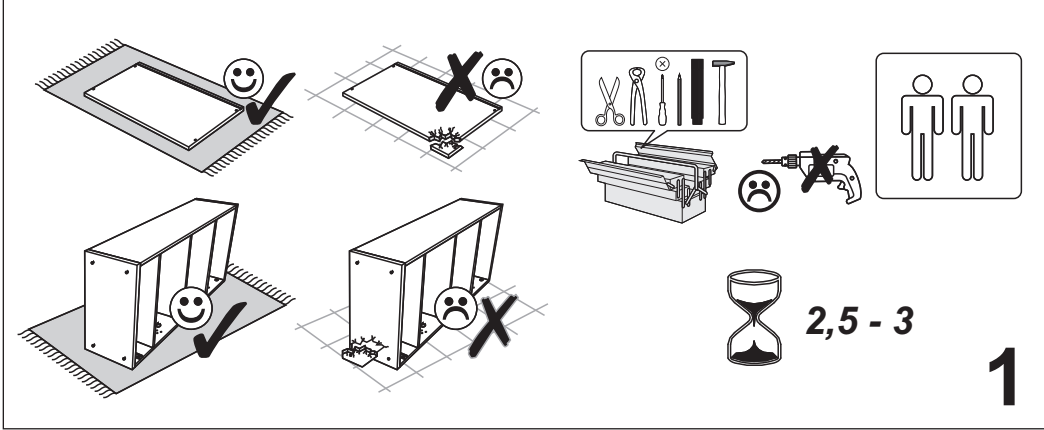


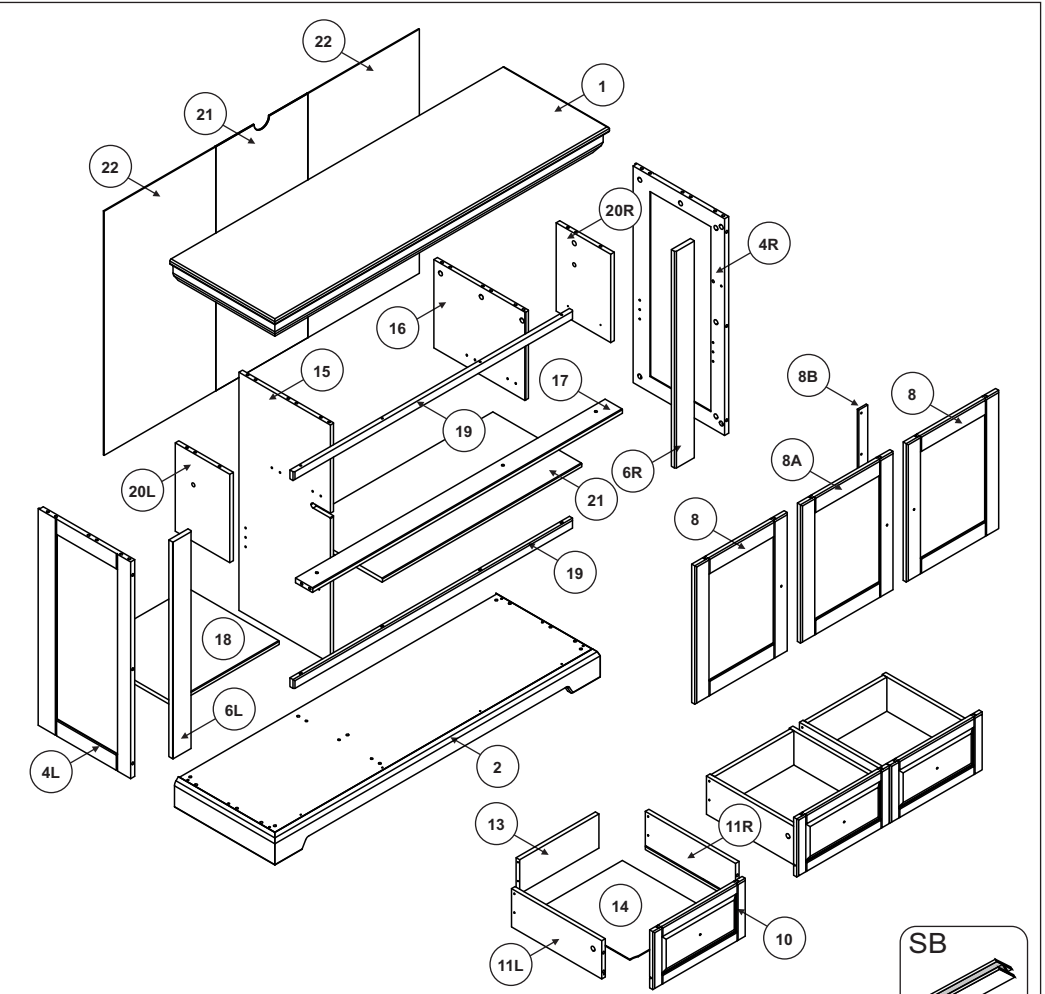


| | | | | | | | |
|----------|-----------|----------------|---------------|----------------|------------------|----------------|------------------|
| PA x2 | RA x2 | YB 1x20 x60 | ZF x3 | YA 7x50 x6 | ZD 18mm x10 | G L=350 x3 | H 6x10,5 x12 |
| XE x1 | MA x10 | W 4mm x1 | B 34mm x34 | C 15x10 x34 | ZA 12mm x8 | YF M4x25 x6 | NT 3,5x40 x20 |
| O x6 | P x4 | R x4 | T x3 | A 8x35 x36 | NA 3,5x16 x12 | Y 5mm x8 | NF 3x16 x4 |

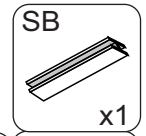




2

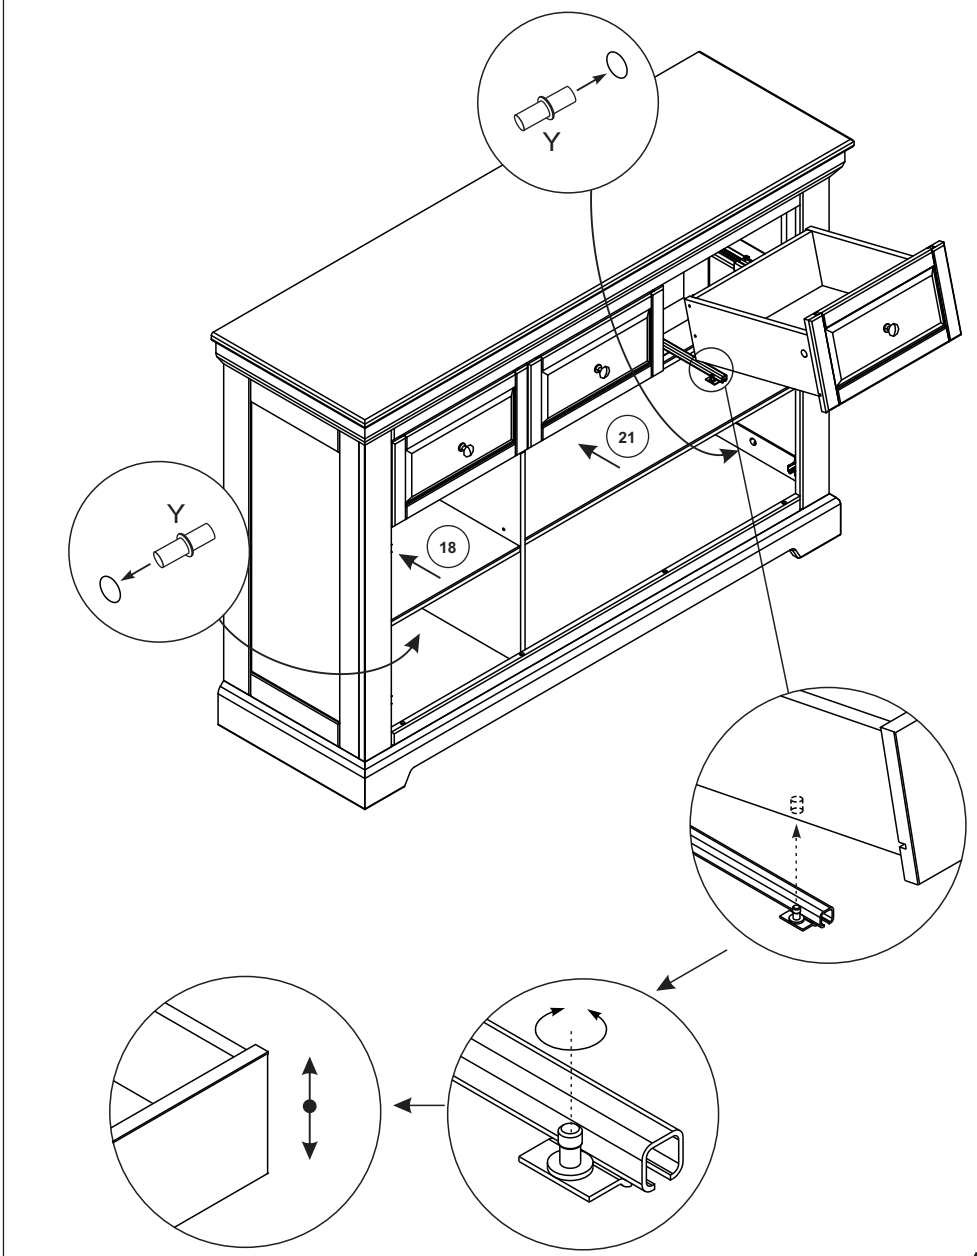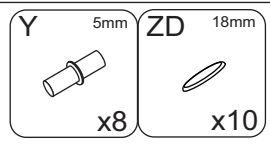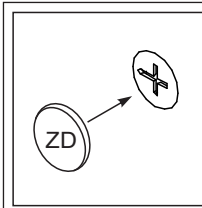

18

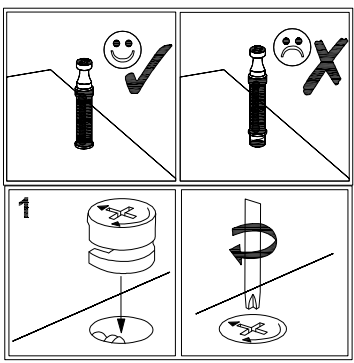




- | | | |
|------------------|----------------|----------------|
| NT 3,5x40 x12 | YB 1x20 x15 | O x3 |
| B 34mm x6 | C 15x10 x6 | YF M4x25 x3 |
| | A 8x35 x6 | |

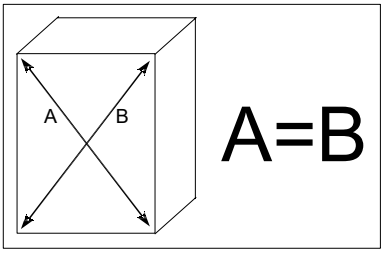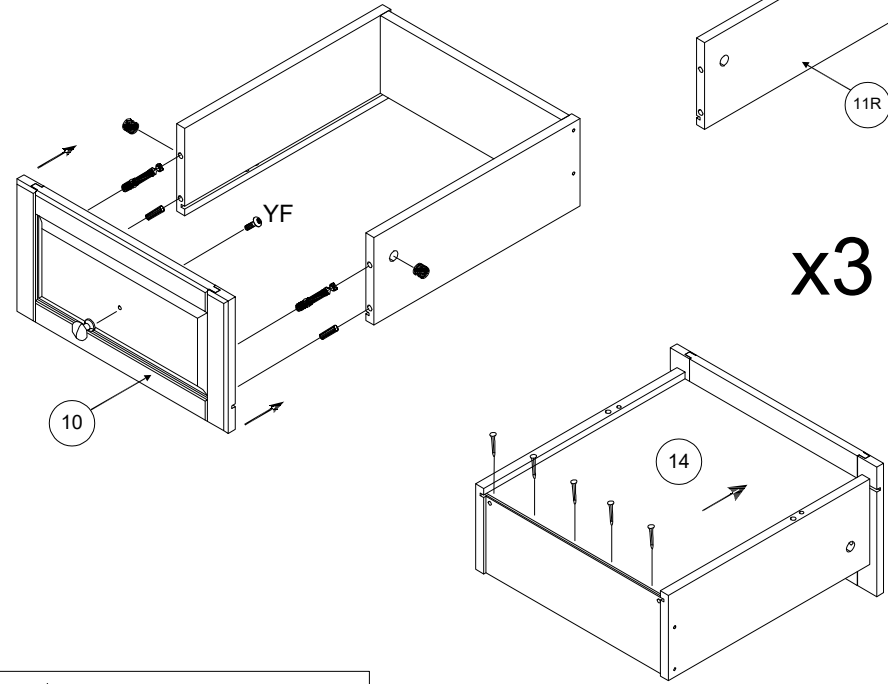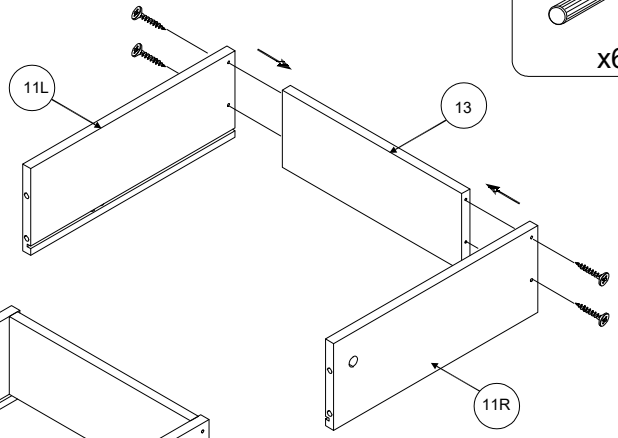


17

3

- | | |
|--------------|---------|
| B 34mm x6 | R x4 |
| A 8x35 x4 | |

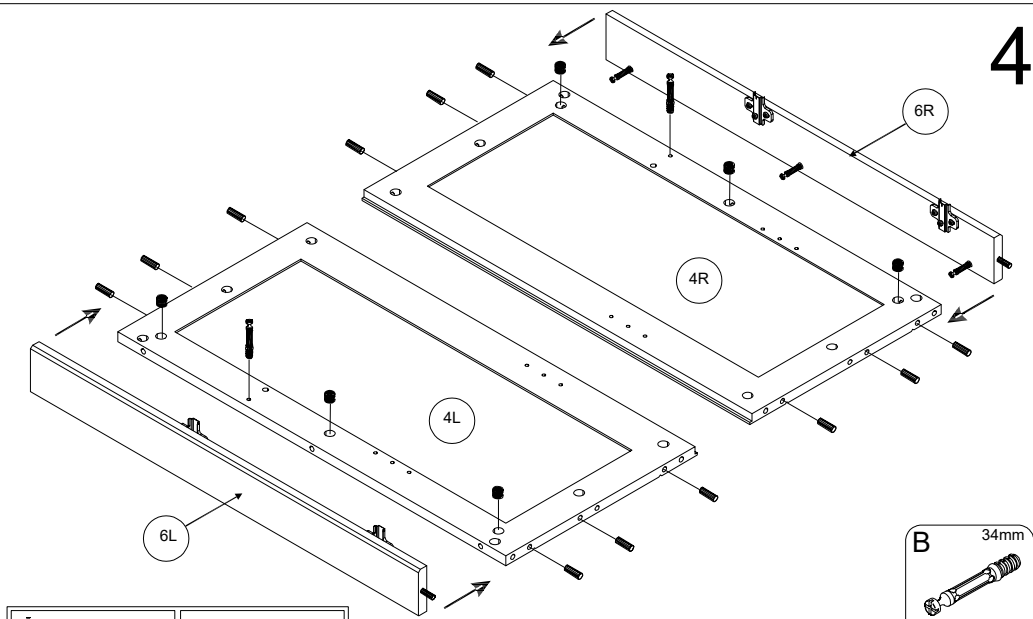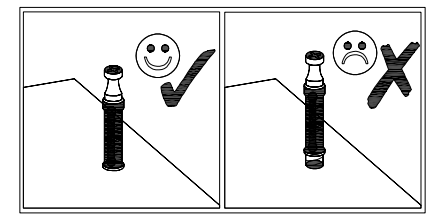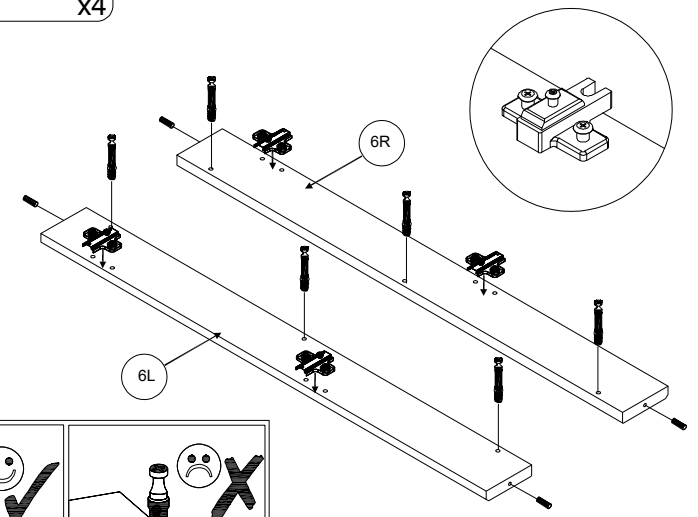



4

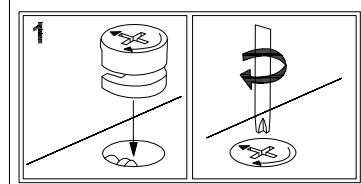

- | | |
|---------------|---------------|
| B 34mm x2 | A 8x35 x12 |
| C 15x10 x6 | |





- NT 3,5x40 x8
- ZA 12mm x8

13

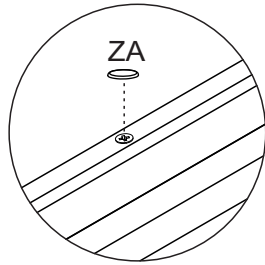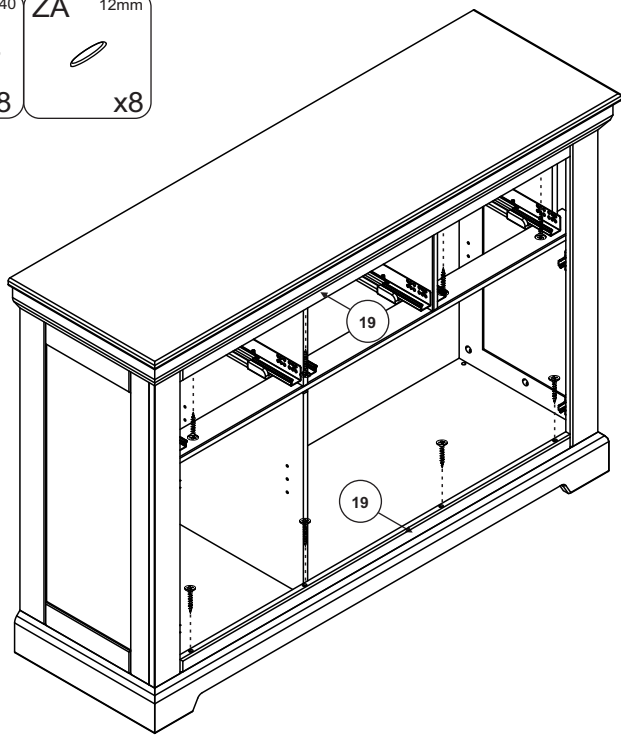




- MA x10
- SB x1
- YB 1x20 x45

14

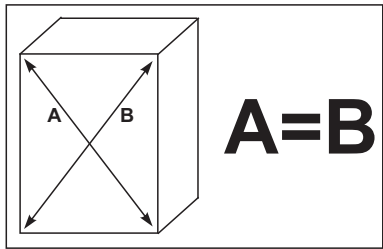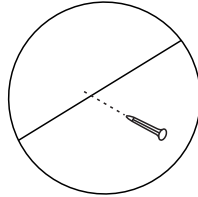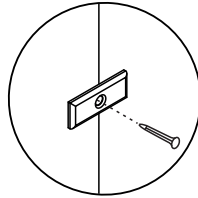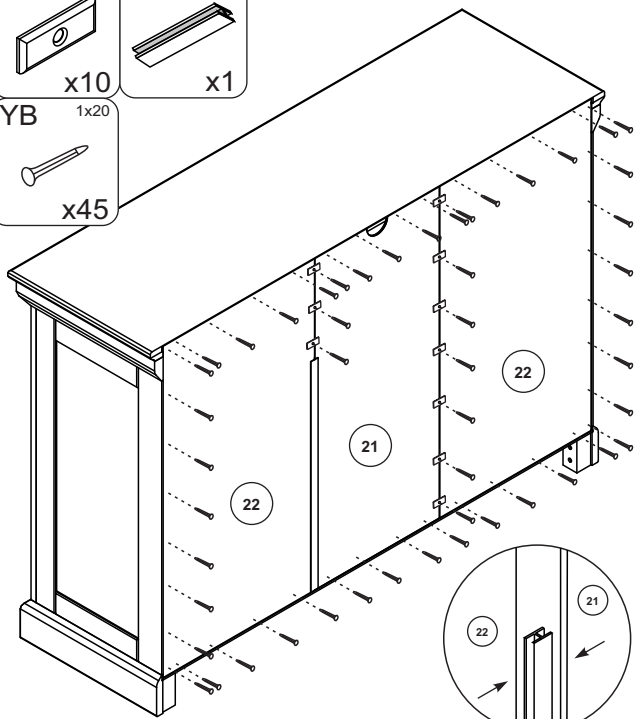

- G L=350 x1
- x4
- H 6x10,5 x4

7

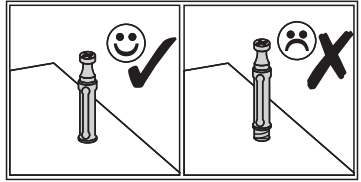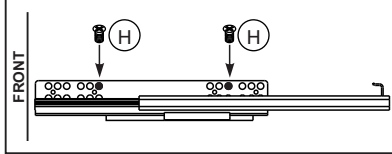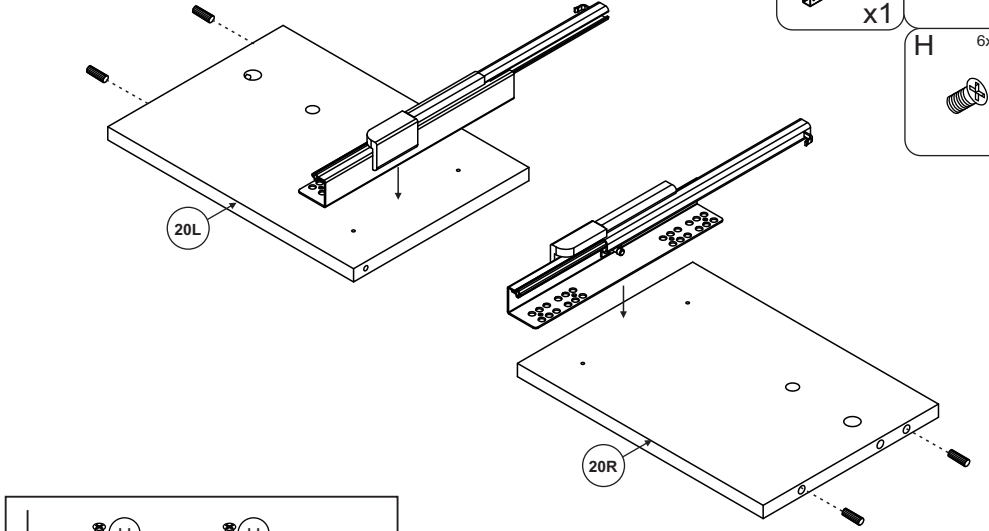

- A 8x35 x2
- B 34mm x20

8

