



# MARONE ELITE KOMODA MAŁA PLMEL 40


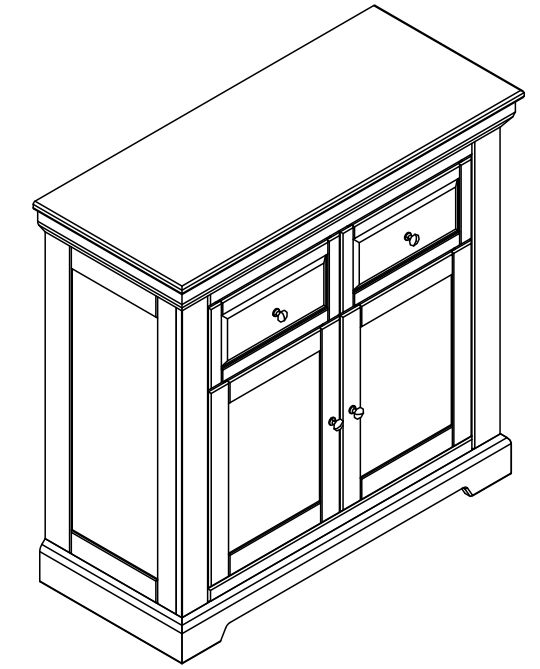


- (D) Montageanleitung
- (GB) Assembly instructions
- (FR) Notice de montage
- (IT) Istruzioni di montaggio
- (NL) Handleiding voor de montage
- (PL) Instrukcja montażu
- (CZ) Montážní návod
- (SK) Návod na montáž
- (HU) Szerelési útmutató
- (RO) Instrucțiuni de montaj
- (TR) Montaj talimatı
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ




15.09.2022

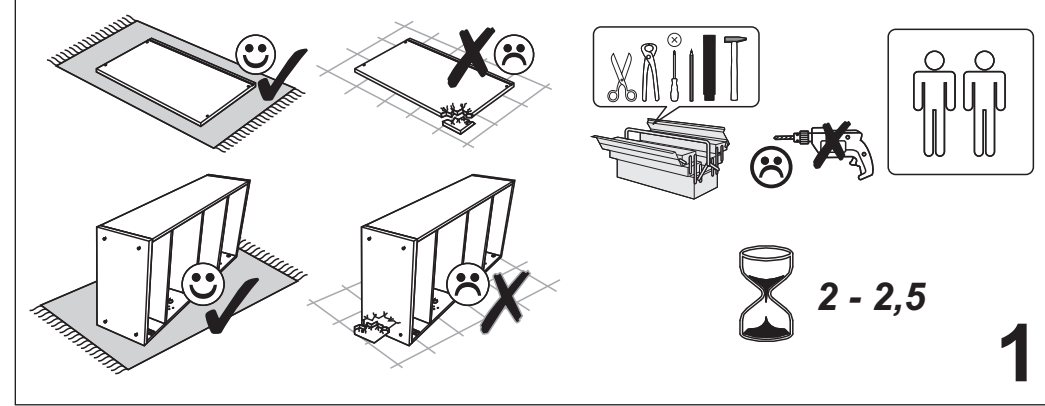


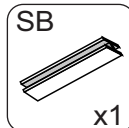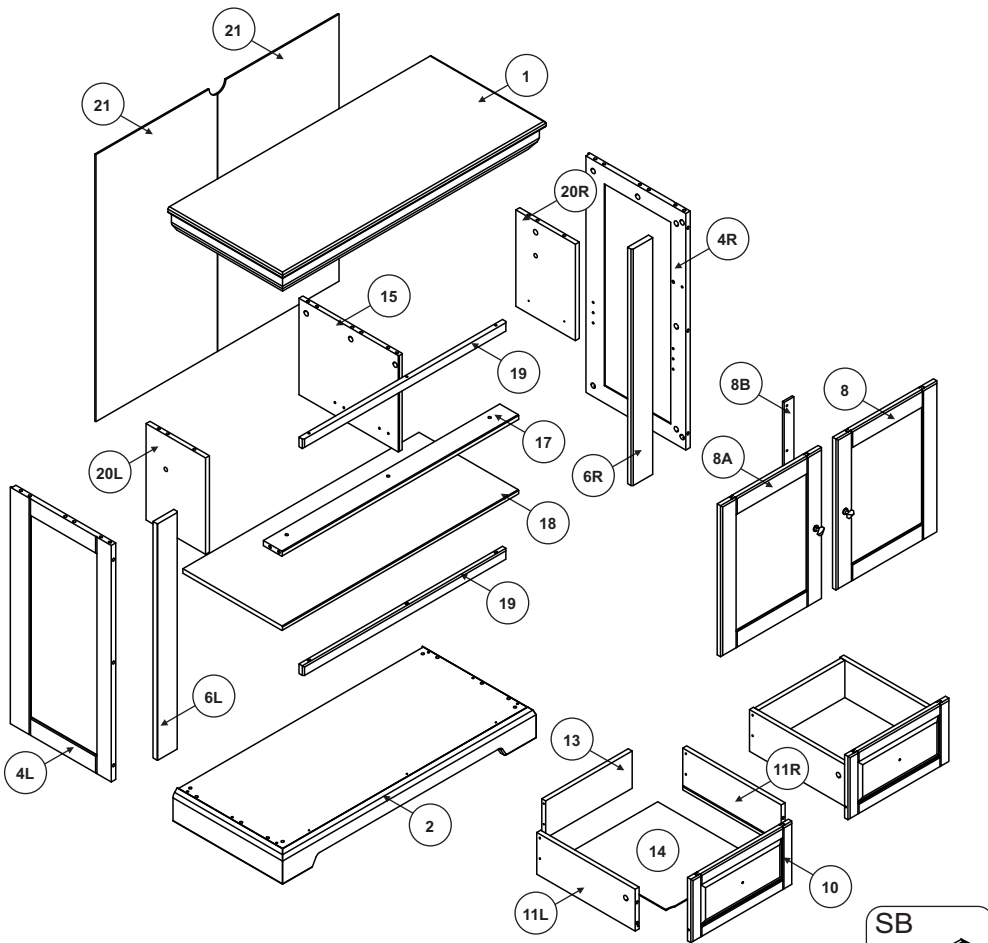


YB 1x20 x39	ZF x2	YA 7x50 x3	ZD 18mm x10	G L=350 x2	H 6x10,5 x8
XE x1	MA x3	W 4mm x1	B 34mm x29	C 15x10 x29	ZA 12mm x6
O x4	P x4	R x4	T x2	A 8x35 x25	NA 3,5x16 x8
				Y 5mm x4	NF 3x16 x4









2

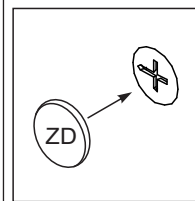

Y 5mm x4	ZD 18mm x10
-------------	----------------




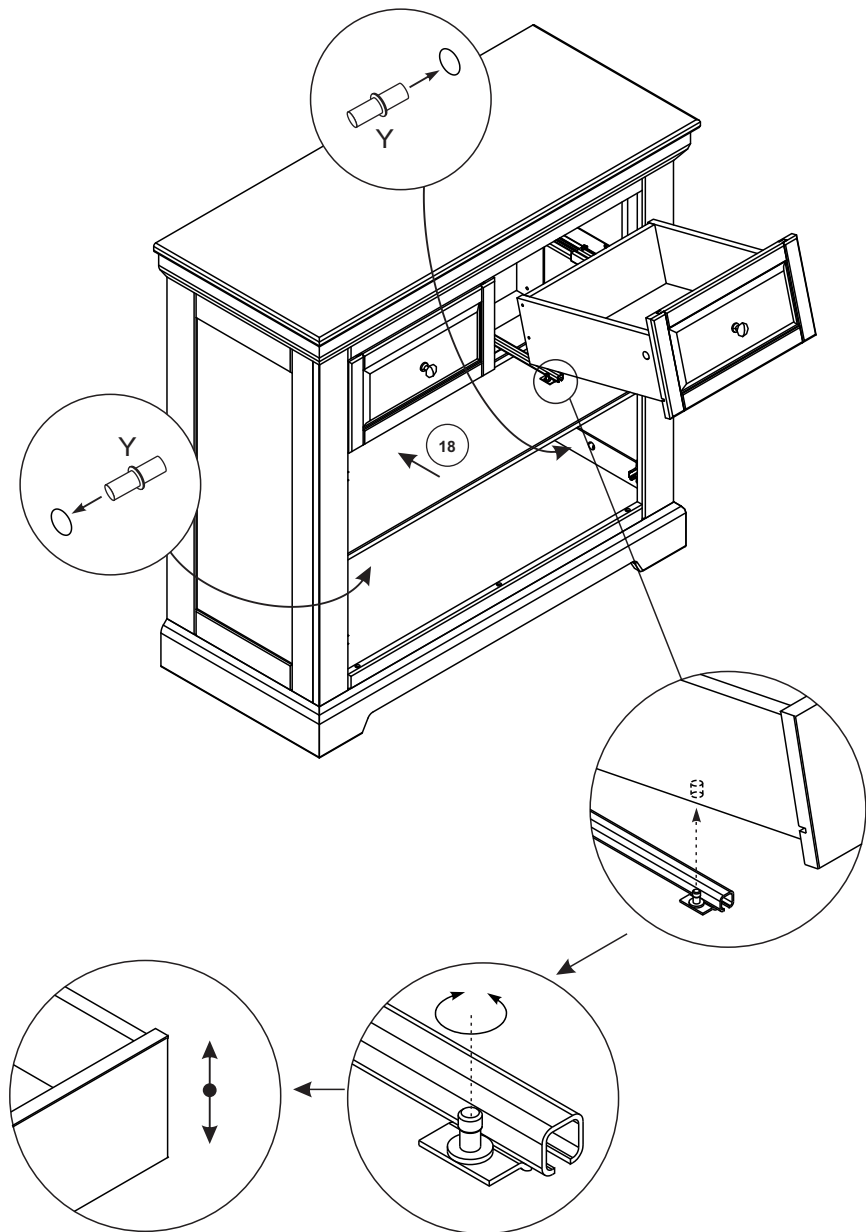


17

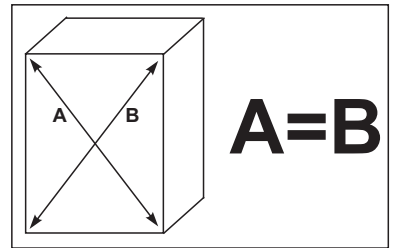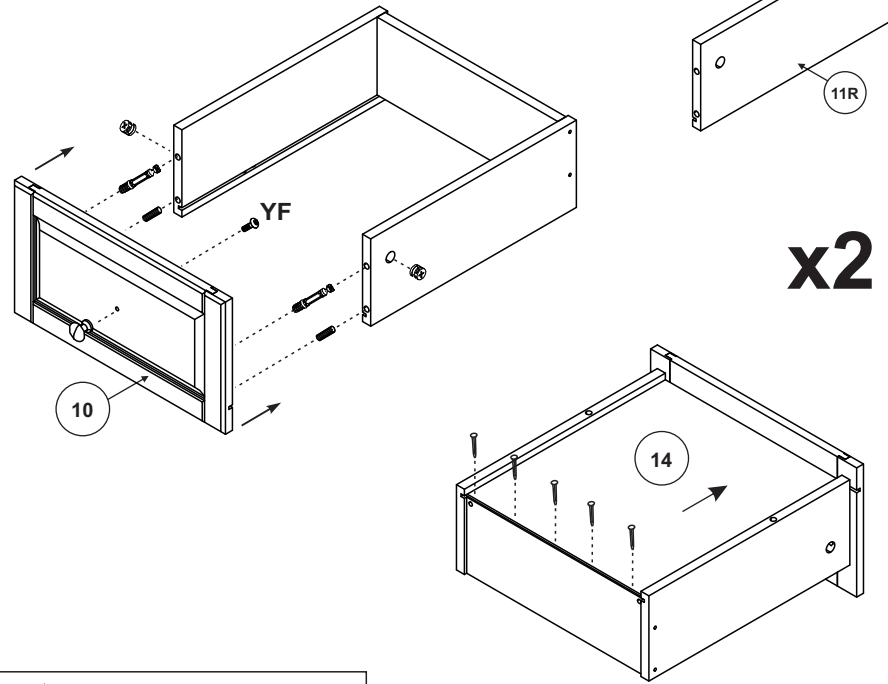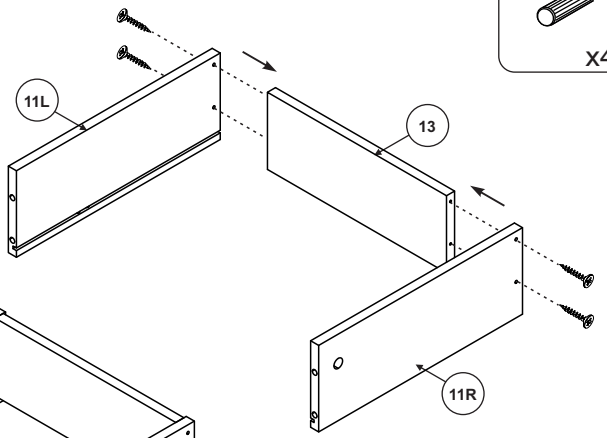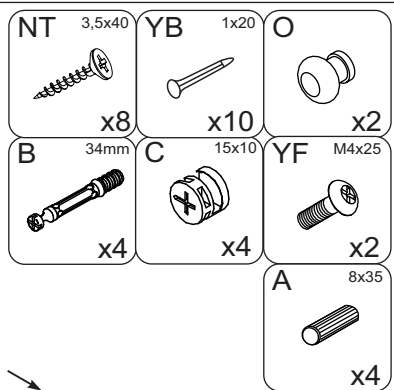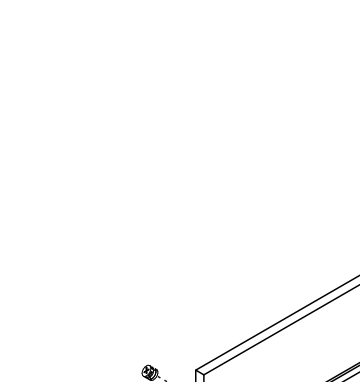
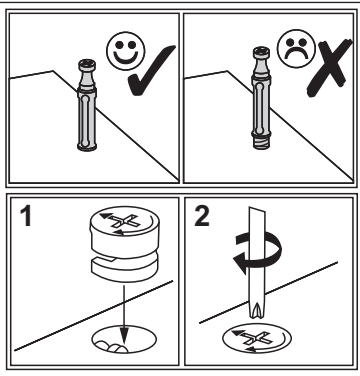



16

3

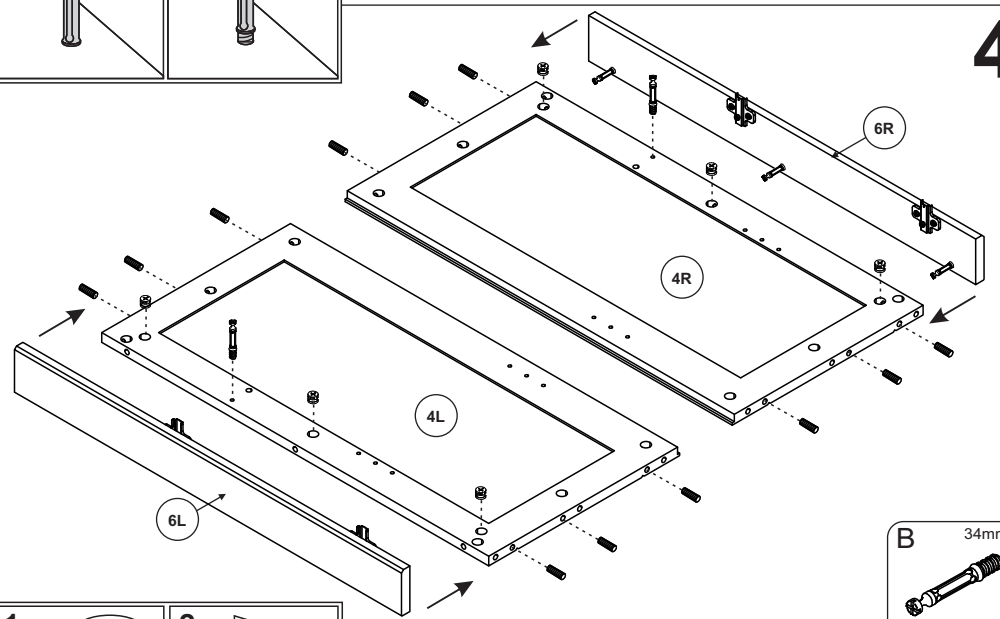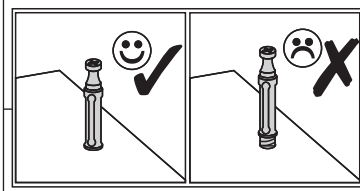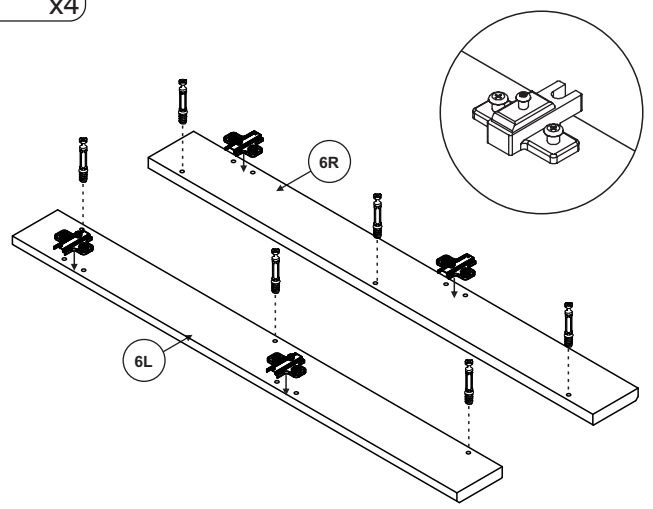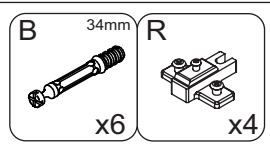


4

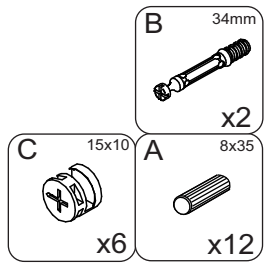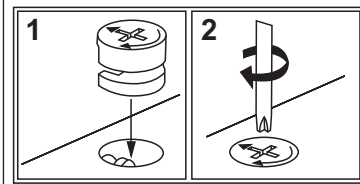


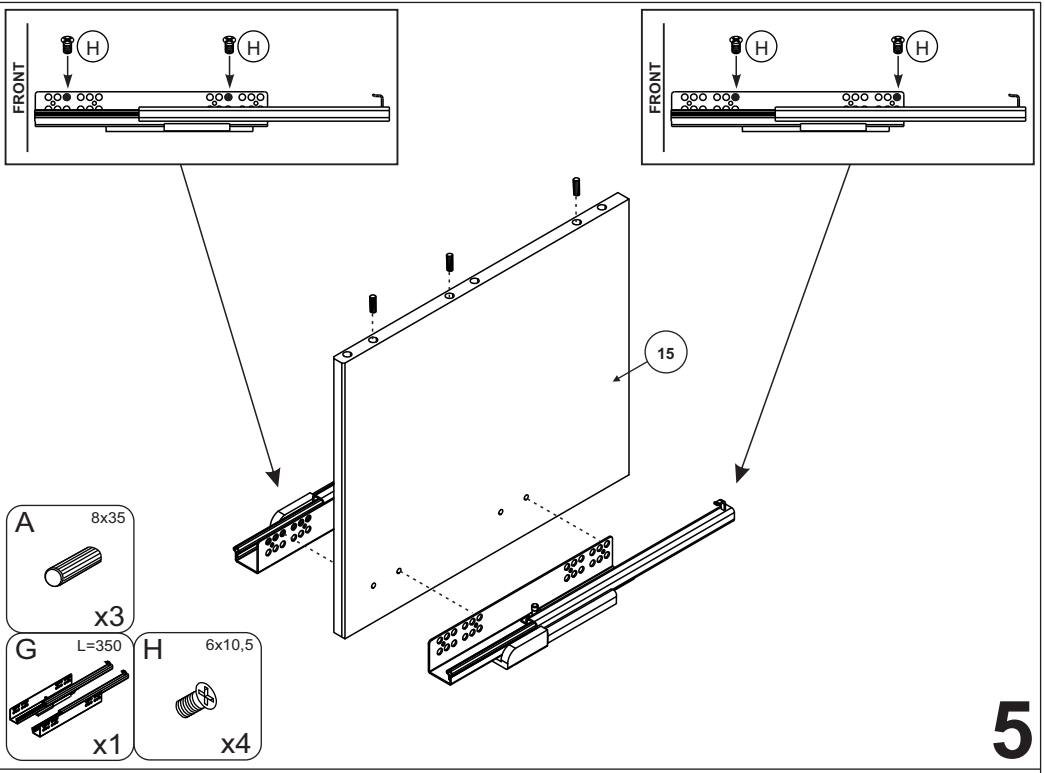


5

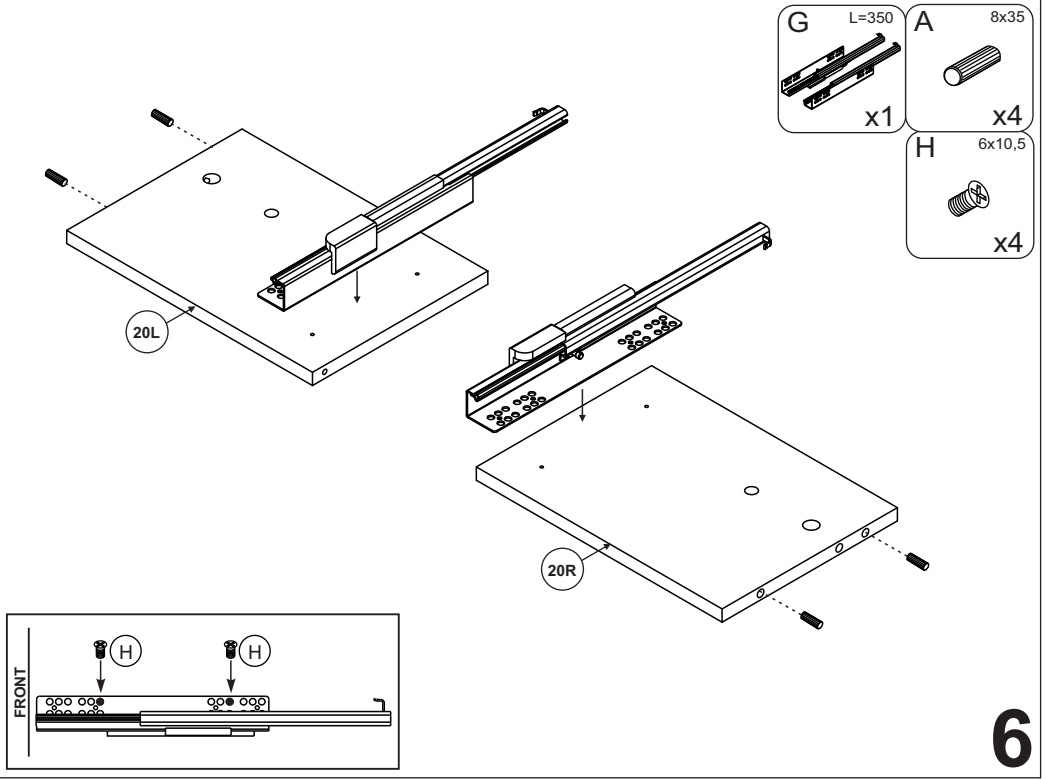

6


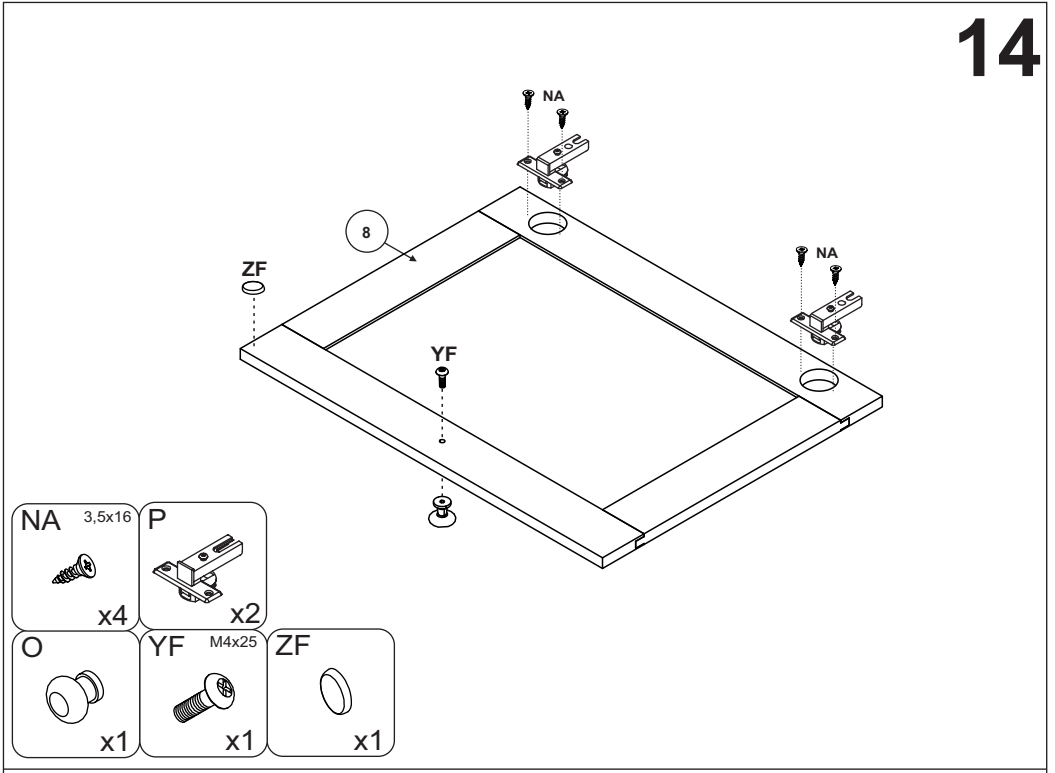


15

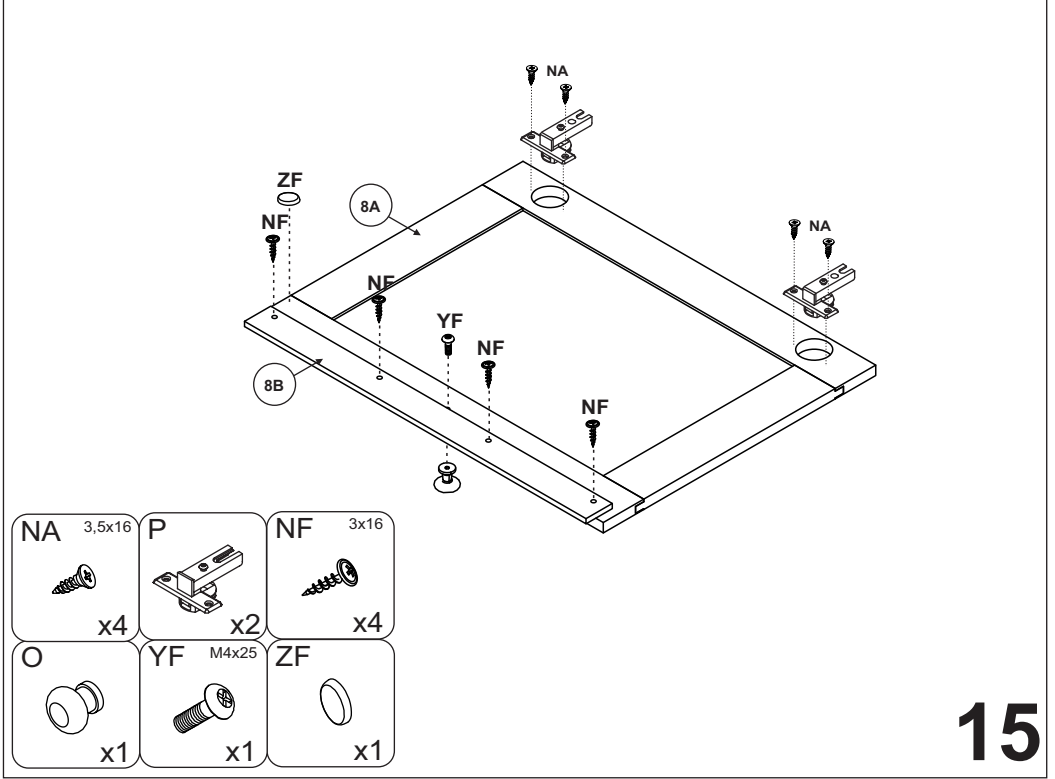








- NT 3,5x40 x6
- ZA 12mm x6

12

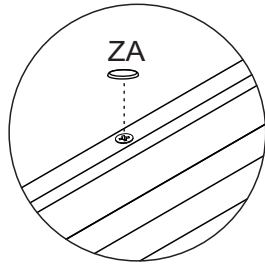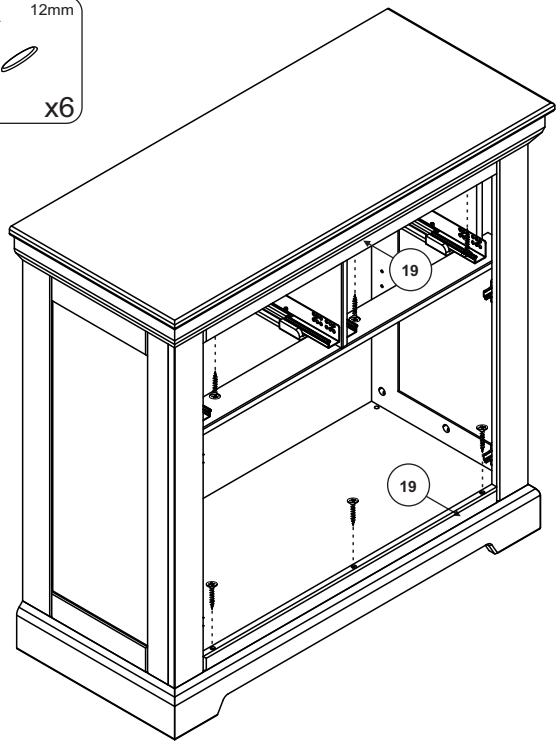

- MA x3
- SB x1
- YB 1x20 x29

13

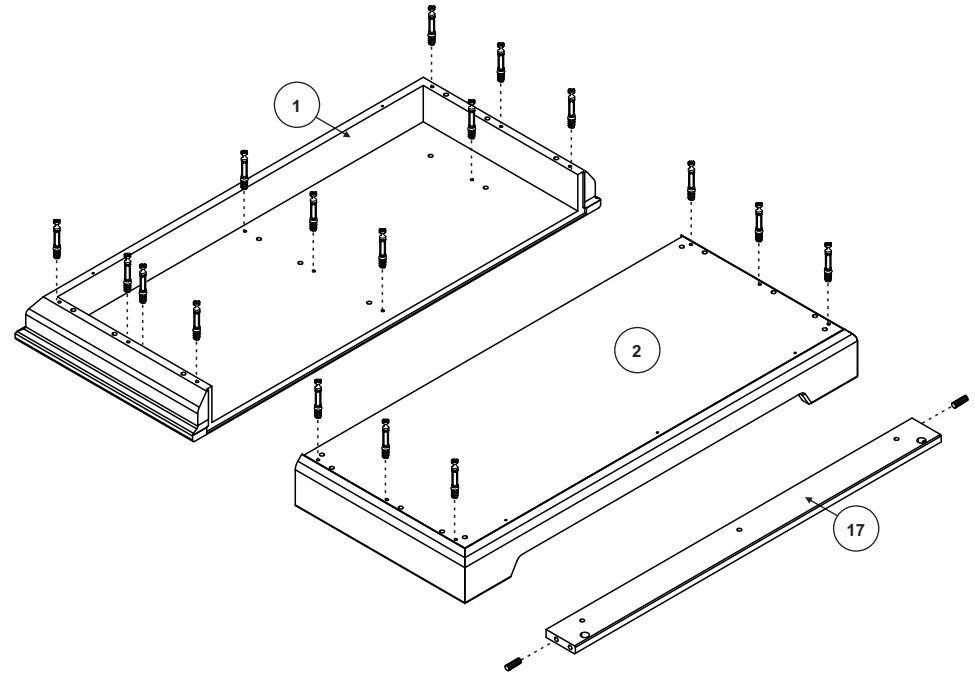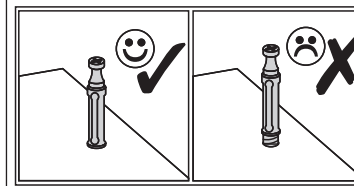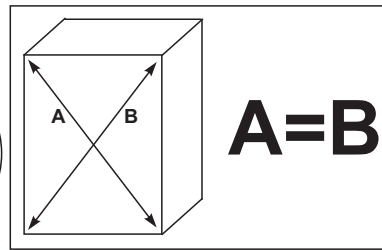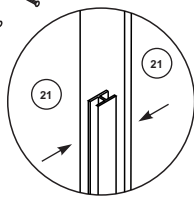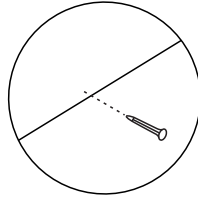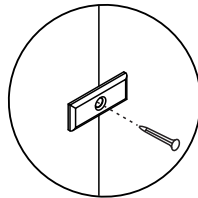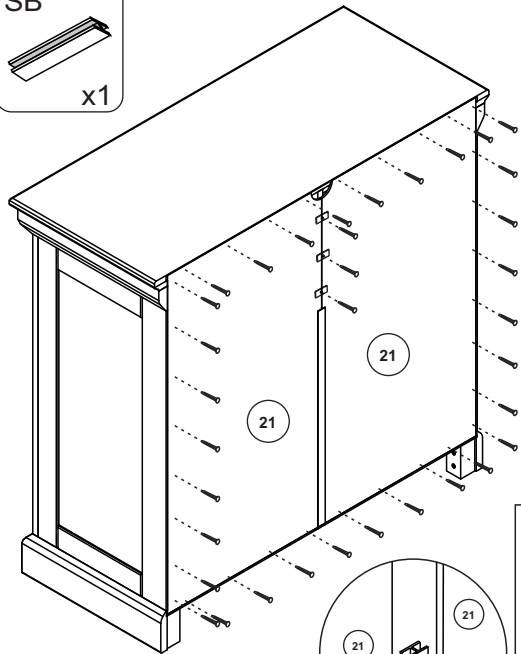

- A 8x35 x2
- B 34mm x17

