




BELLUNO

SZAFKA 2.0


PL030






- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |

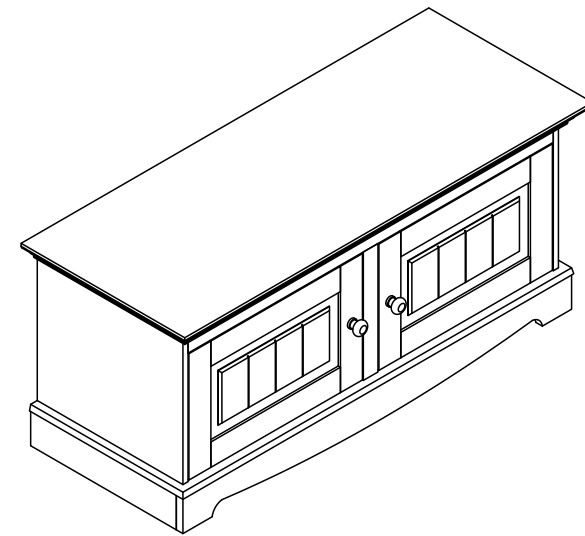



14.03.2019.

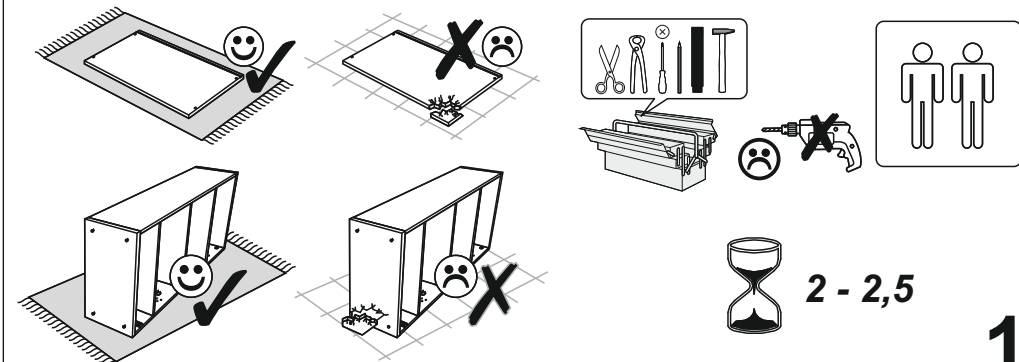

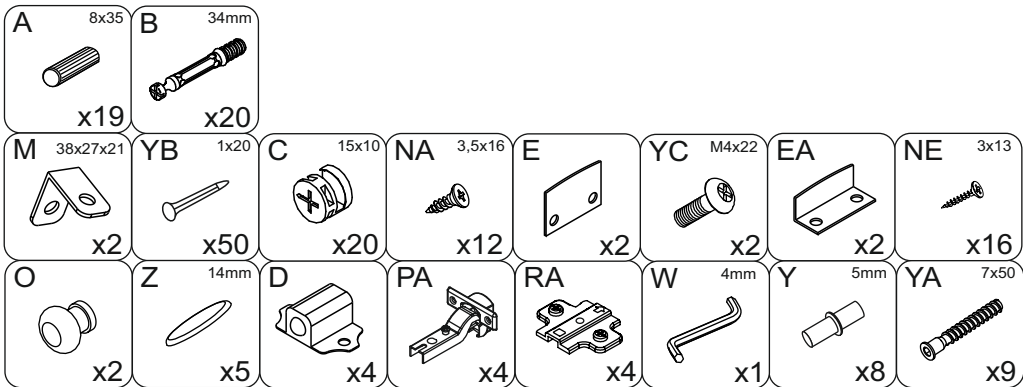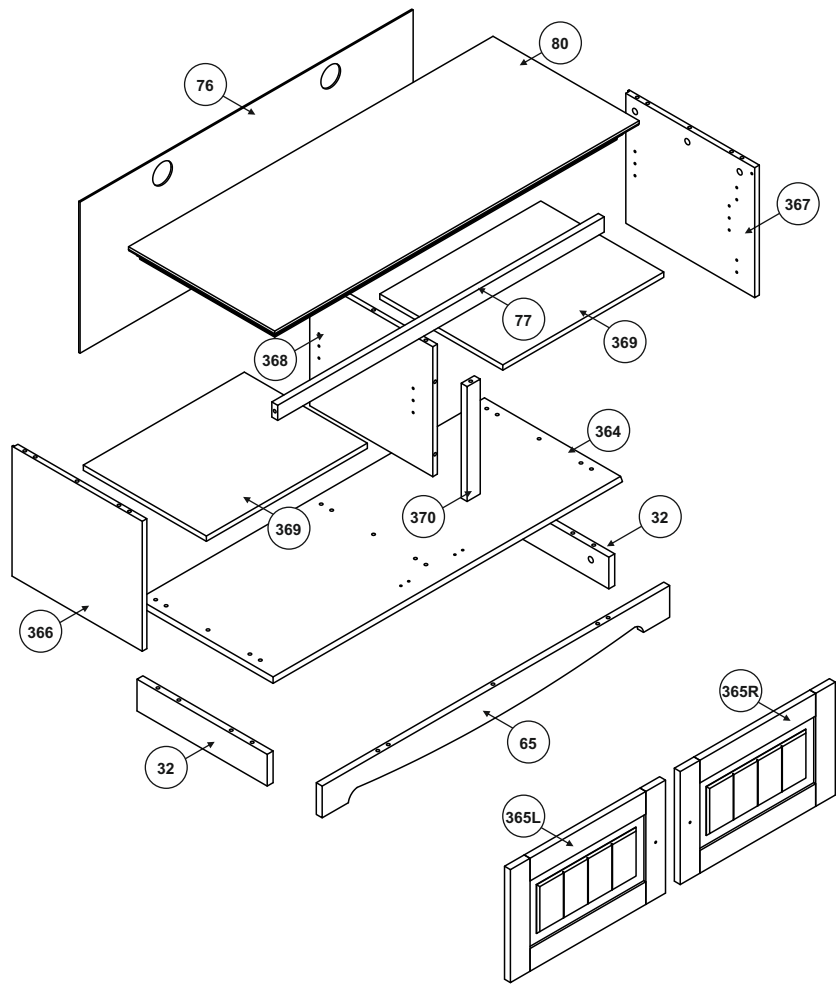


2



16

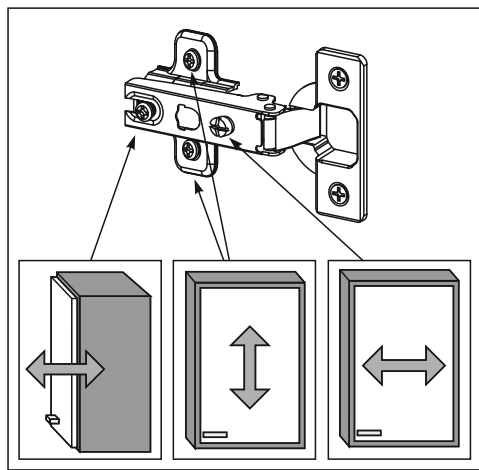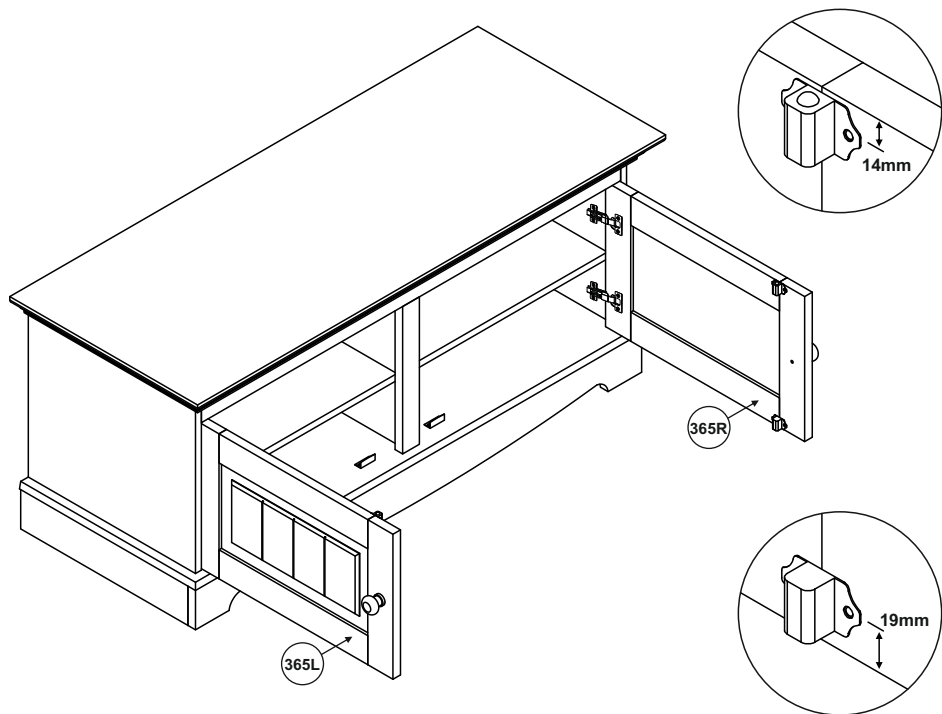

B 34mm
x9

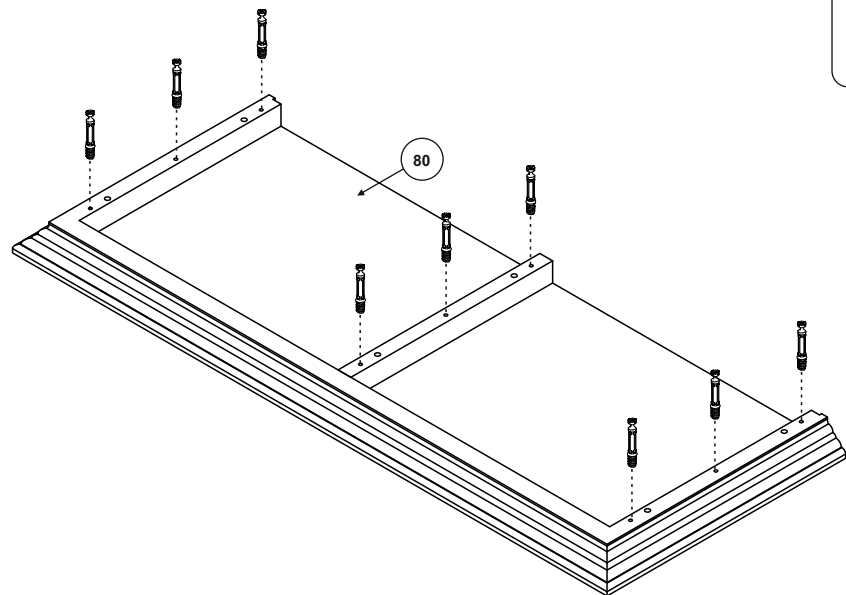




3

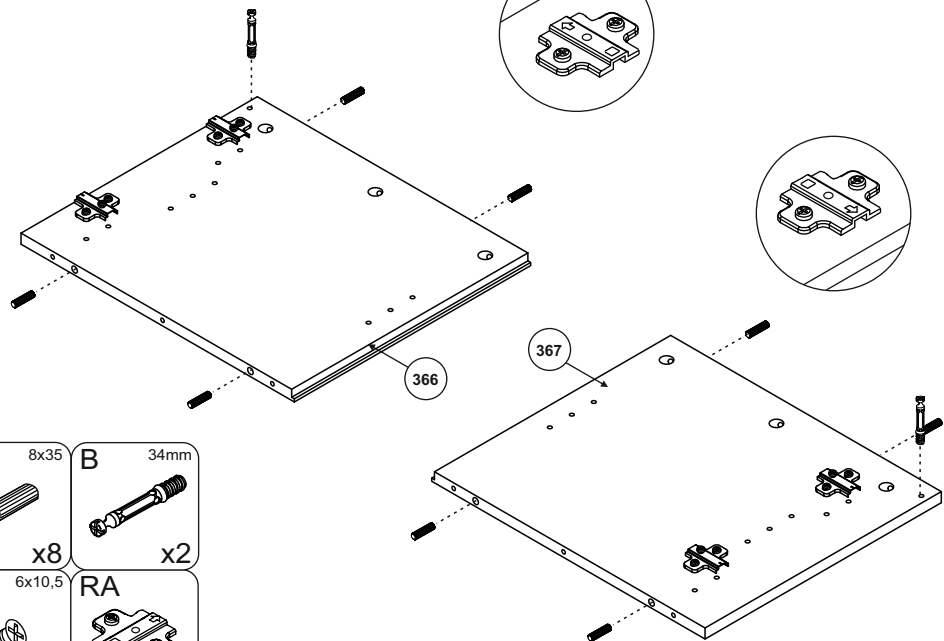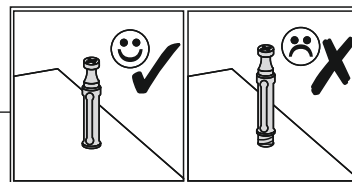

4


- | | |
|-----------------------|---------------------|
| A 8x35
x8 | B 34mm
x2 |
| H 6x10,5
x4 | RA
x4 |

- EA x2
- NE 3x13 x4
- Y 5mm x8

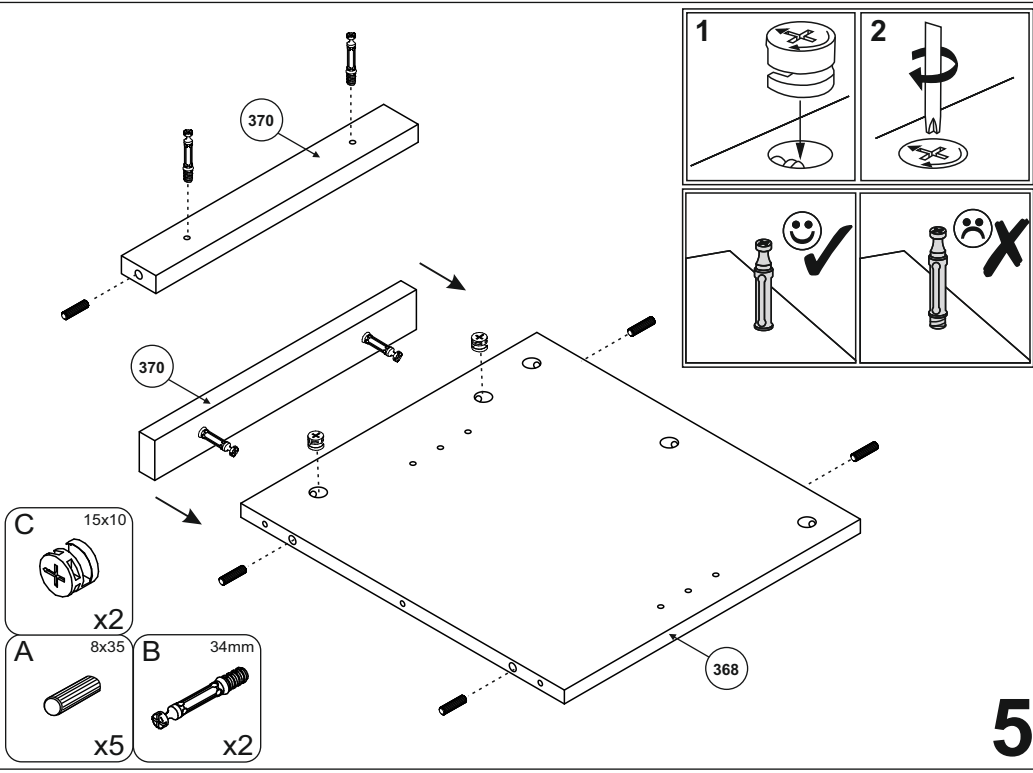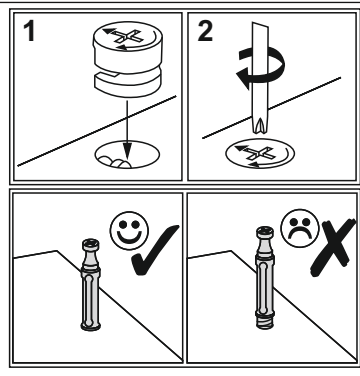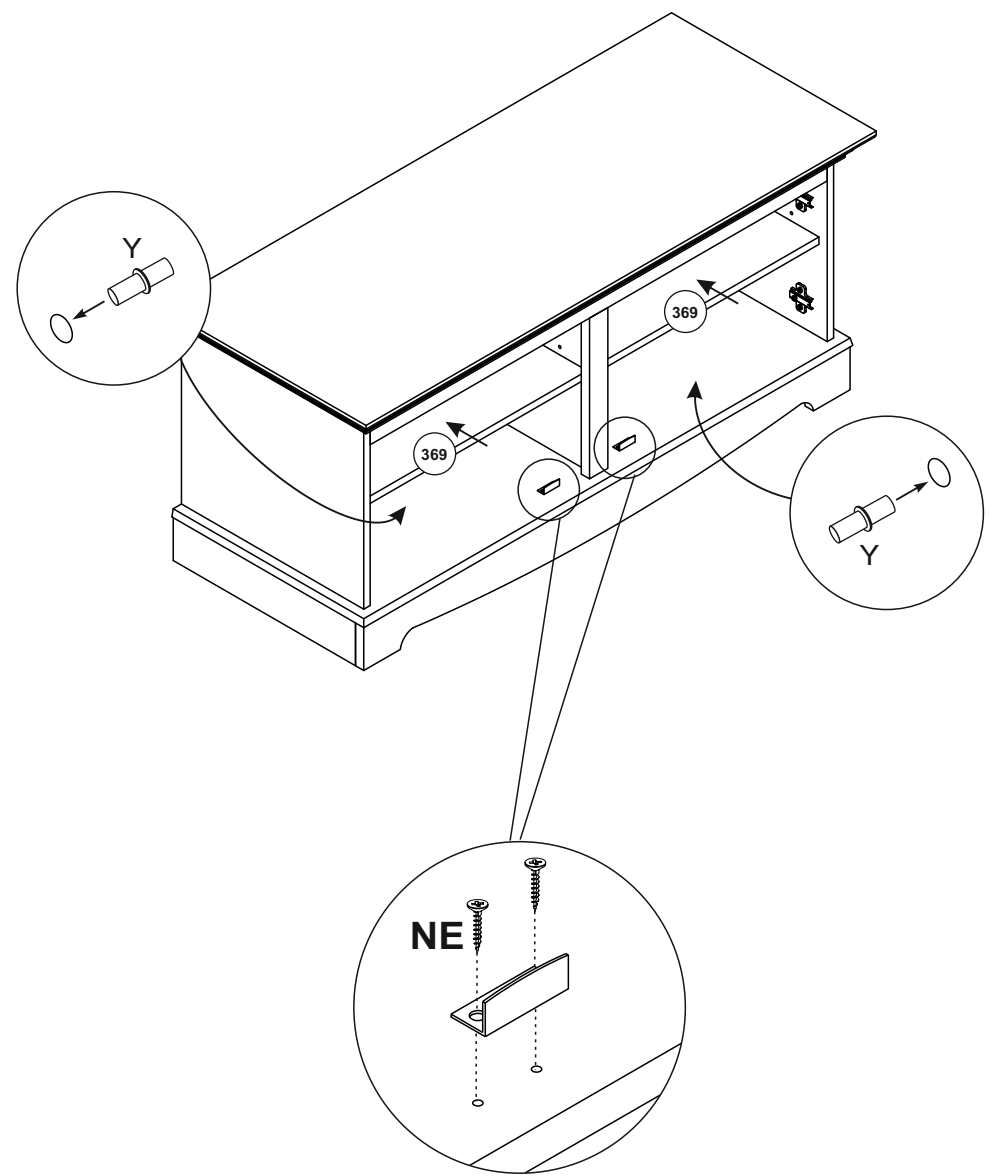

- C 15x10 x2
- A 8x35 x5
- B 34mm x2

5


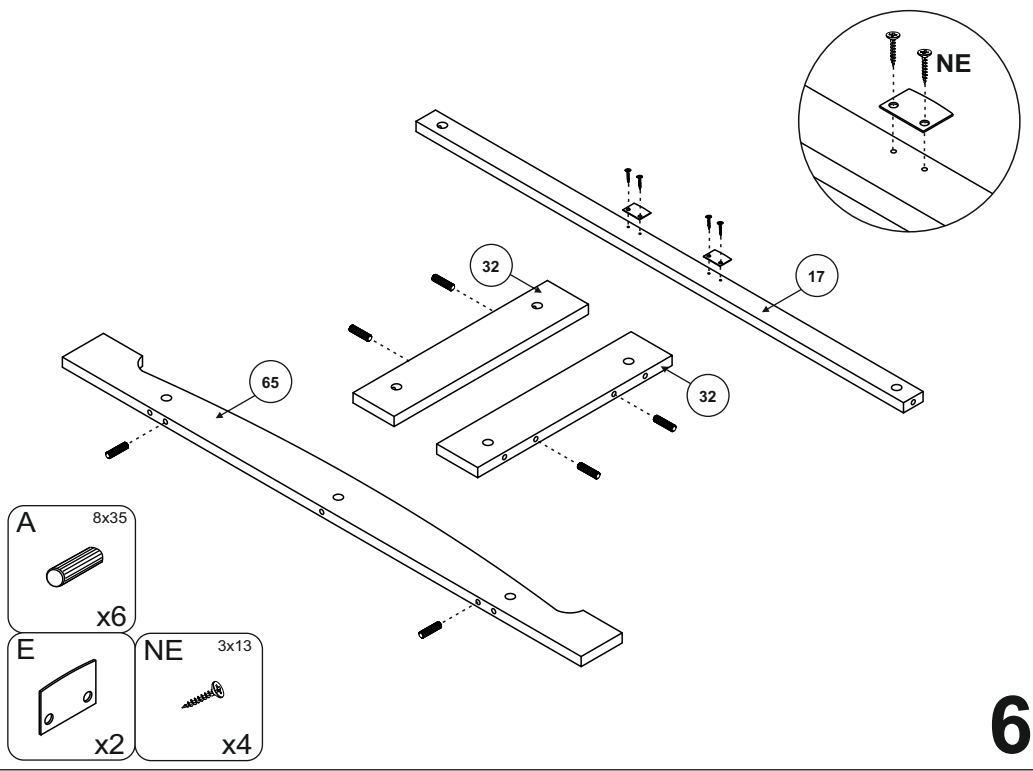


- A 8x35 x6
- E 8x35 x2
- NE 3x13 x4

6






YB 1x20
x50

13

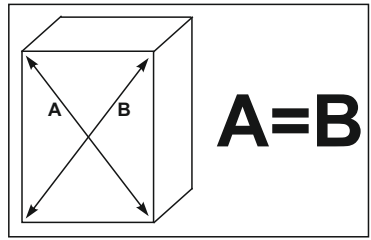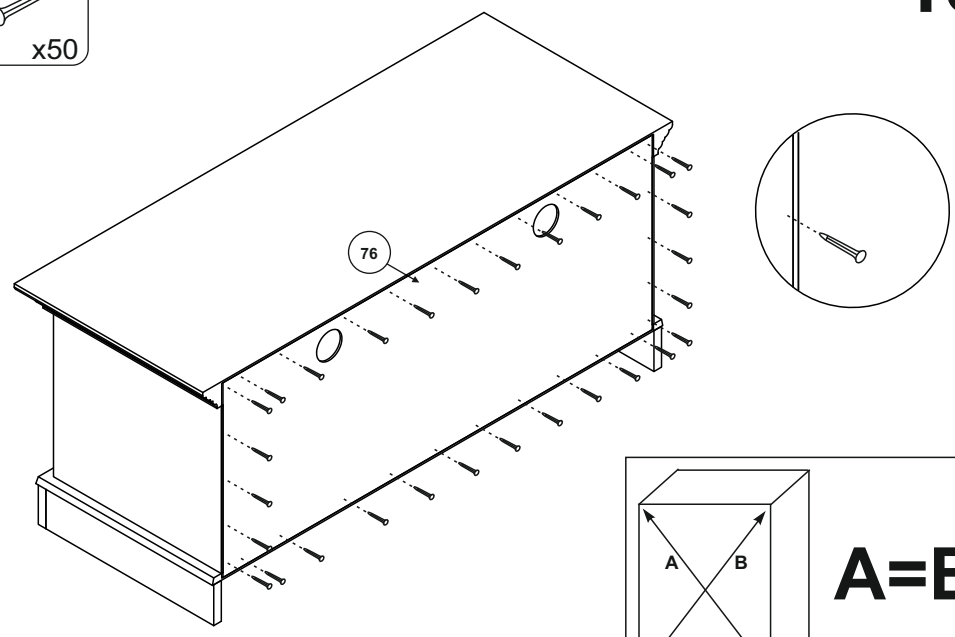

7


C 15x10
x2

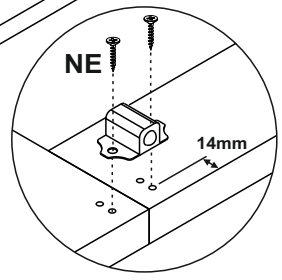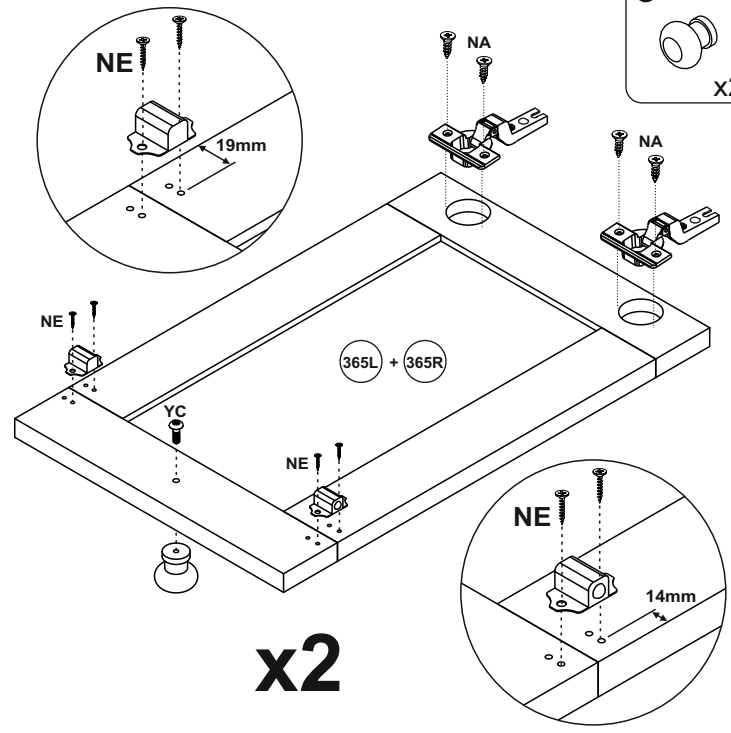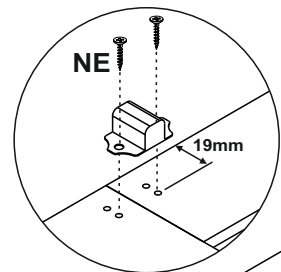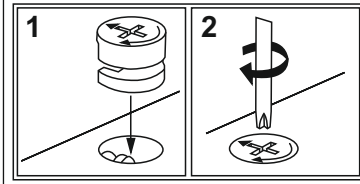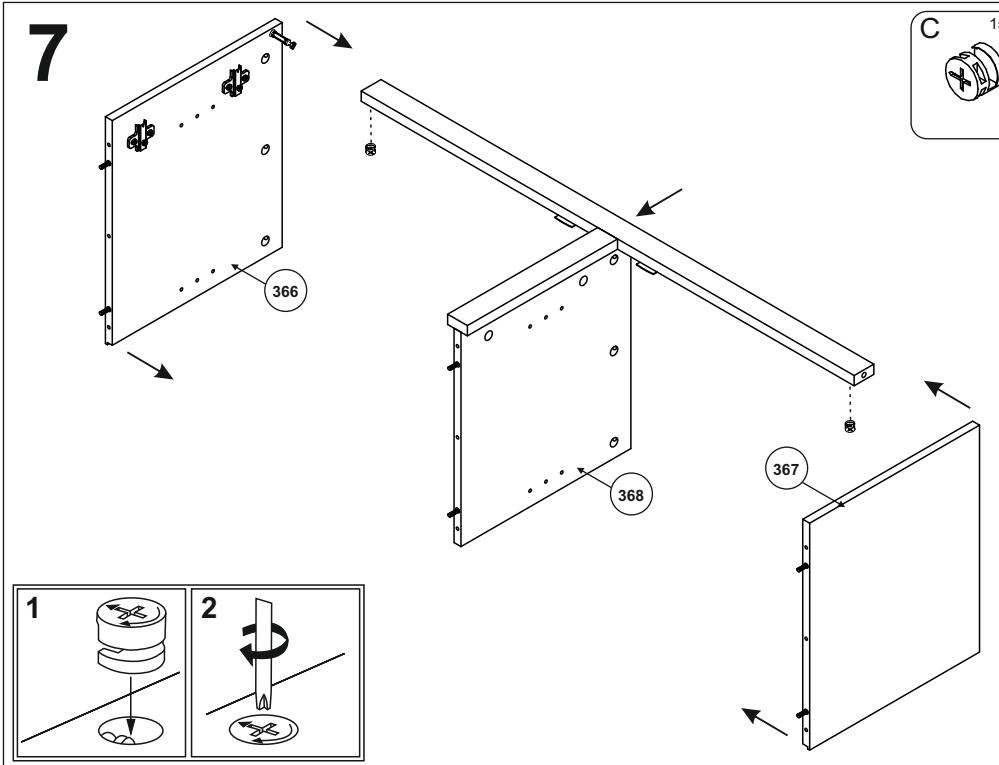

14

- O x2
- PA x4
- NA 3.5x16 x8
- D x4
- NE 3x13 x8
- YC M4x22 x2

8

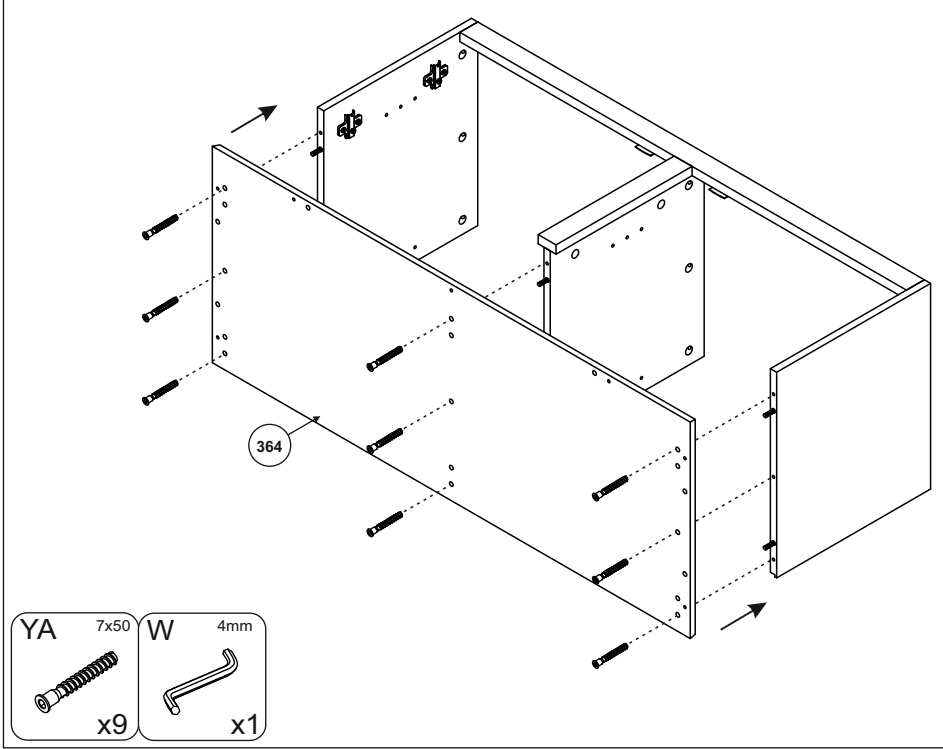

- YA 7x50 x9
- W 4mm x1

