

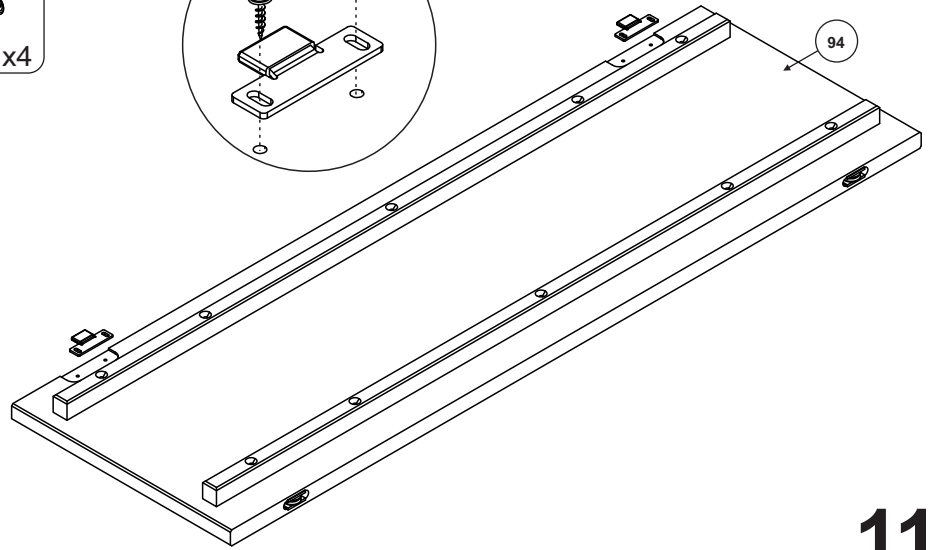
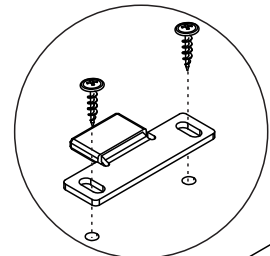
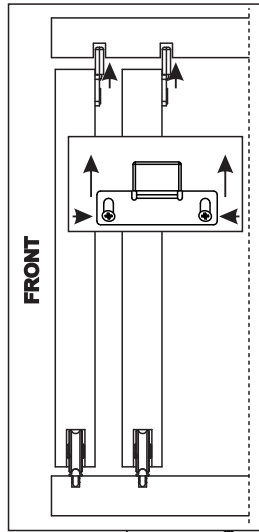



- L  x2
- NO 3,5x15  x4



11



FRONT

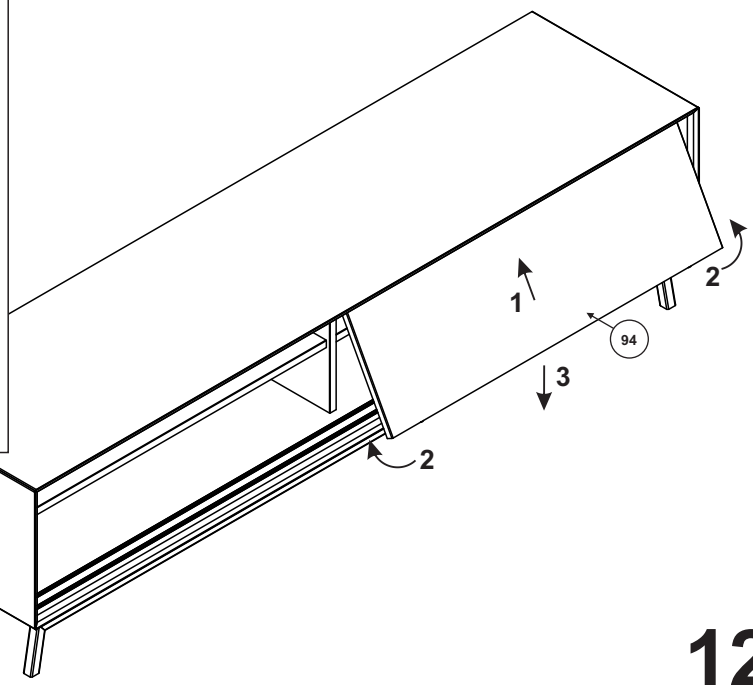

12




# MODERN LOFT

## SZAFKA RTV 200 ZAMKNIĘTA - KORPUS PLMOL07K






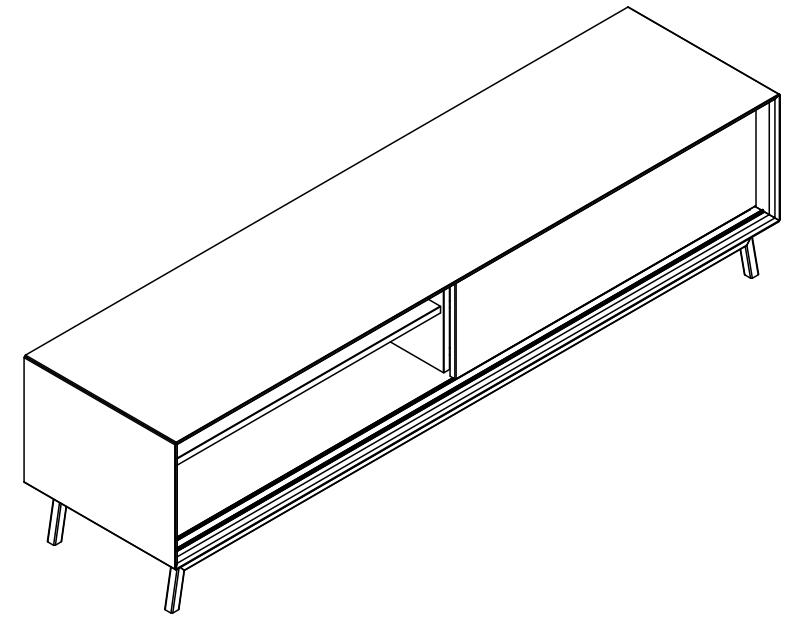





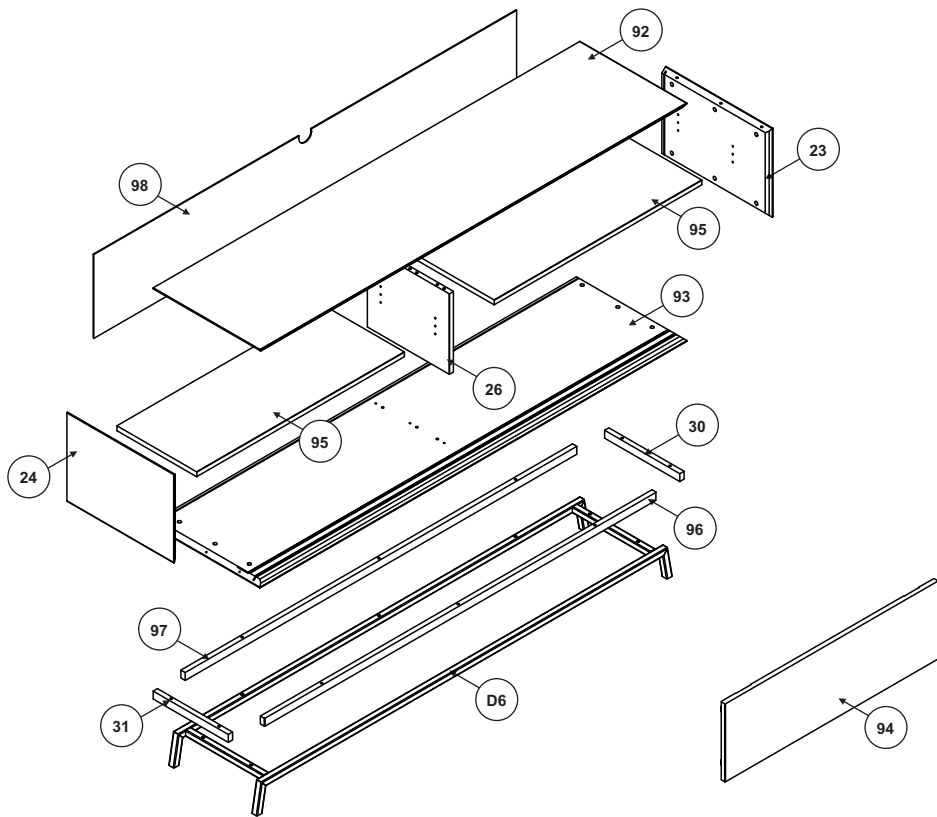





- |   |                                     |
|---|-------------------------------------|
| <b>(D)</b> Montageanleitung             | <b>(GB)</b> Assembly instructions   |
| <b>(FR)</b> Notice de montage           | <b>(IT)</b> Istruzioni di montaggio |
| <b>(NL)</b> Handleiding voor de montage | <b>(PL)</b> Instrukcja montażu      |
| <b>(CZ)</b> Montážní návod              | <b>(SK)</b> Návod na montáž         |
| <b>(HU)</b> Szerelési útmutató          | <b>(RO)</b> Instrucțiuni de montaj  |
| <b>(TR)</b> Montaj talimatı             | <b>(RU)</b> ИНСТРУКЦИЯ ПО МОНТАЖУ   |




30.08.2022



1



<b>A</b> 8x35  x6	<b>MC</b>  x12	<b>L</b>  x2	<b>NS</b> 3x20  x4	<b>Y</b> 5mm  x8	<b>WD</b> 5mm  x1
<b>BF</b>  x12	<b>CA</b> 15x13,2  x24	<b>NO</b> 3,5x15  x4	<b>WC</b> 4mm  x1	<b>YM</b> M6x45  x7	<b>YN</b> M6x40  x3
				<b>BC</b> 34mm  x6	<b>C</b> 15x10  x6




**2**

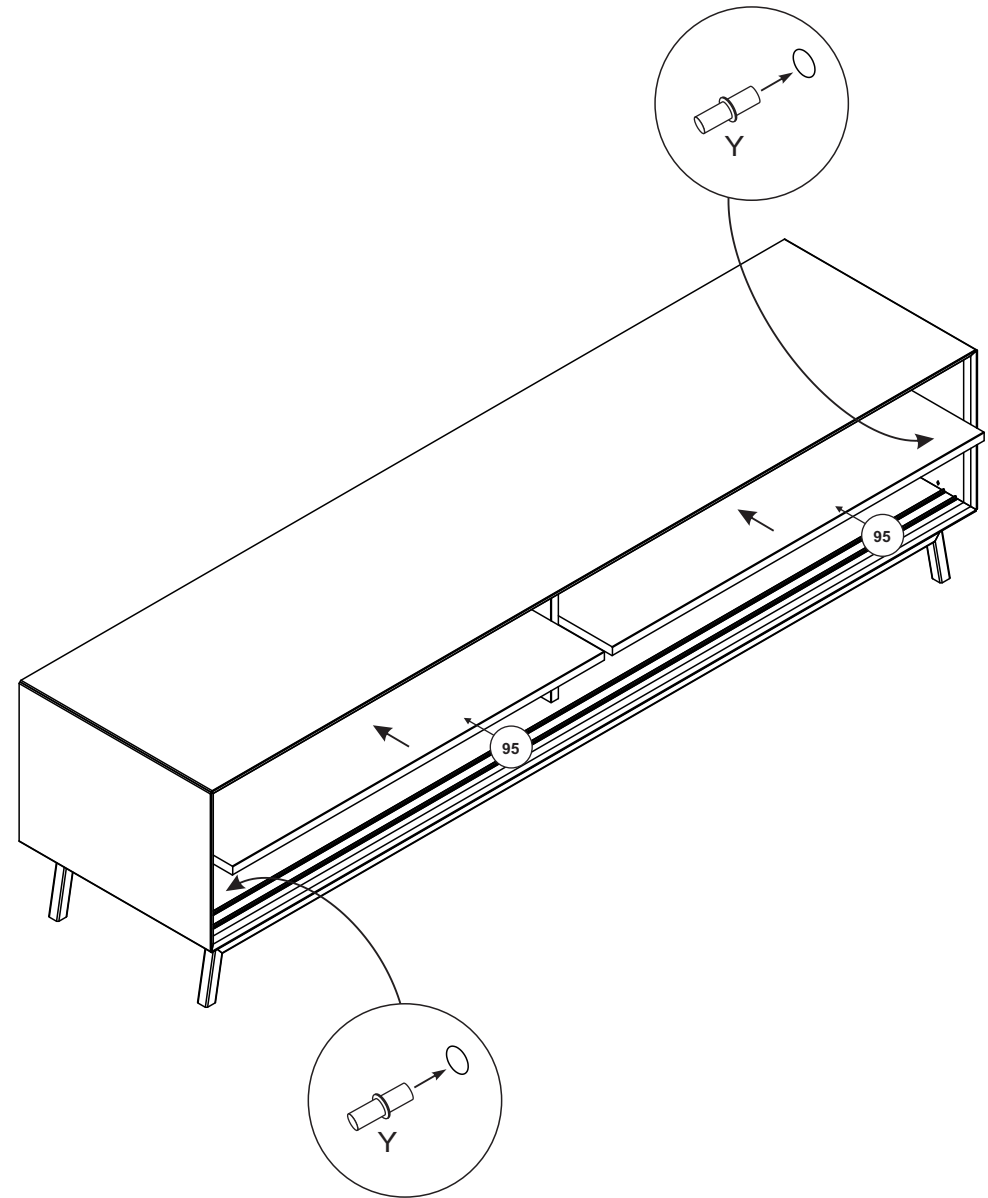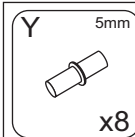


**10**

YN M6x40  
x3


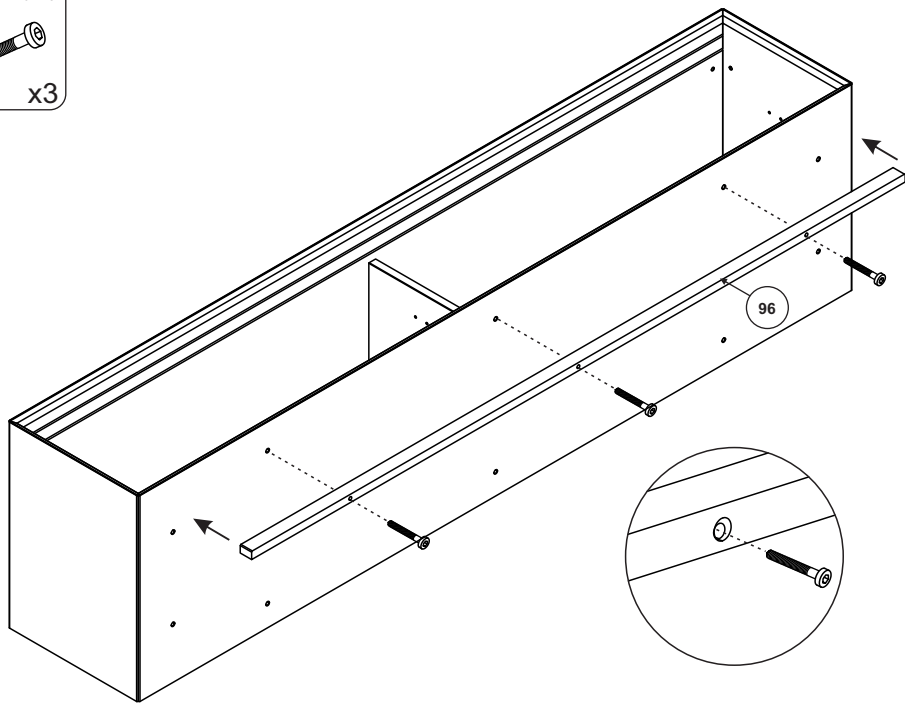


8


YM M6x45  
x7

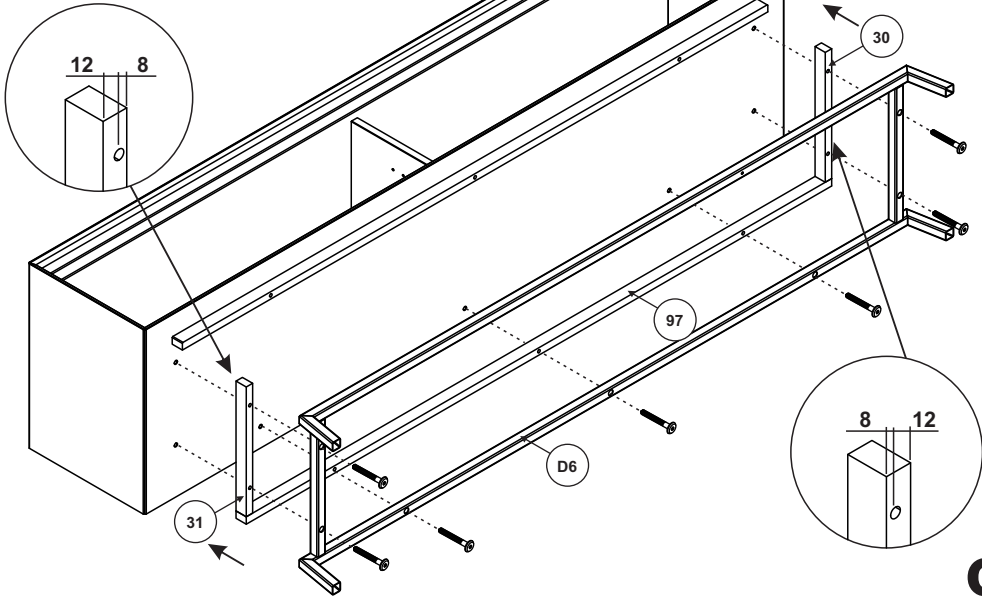







9

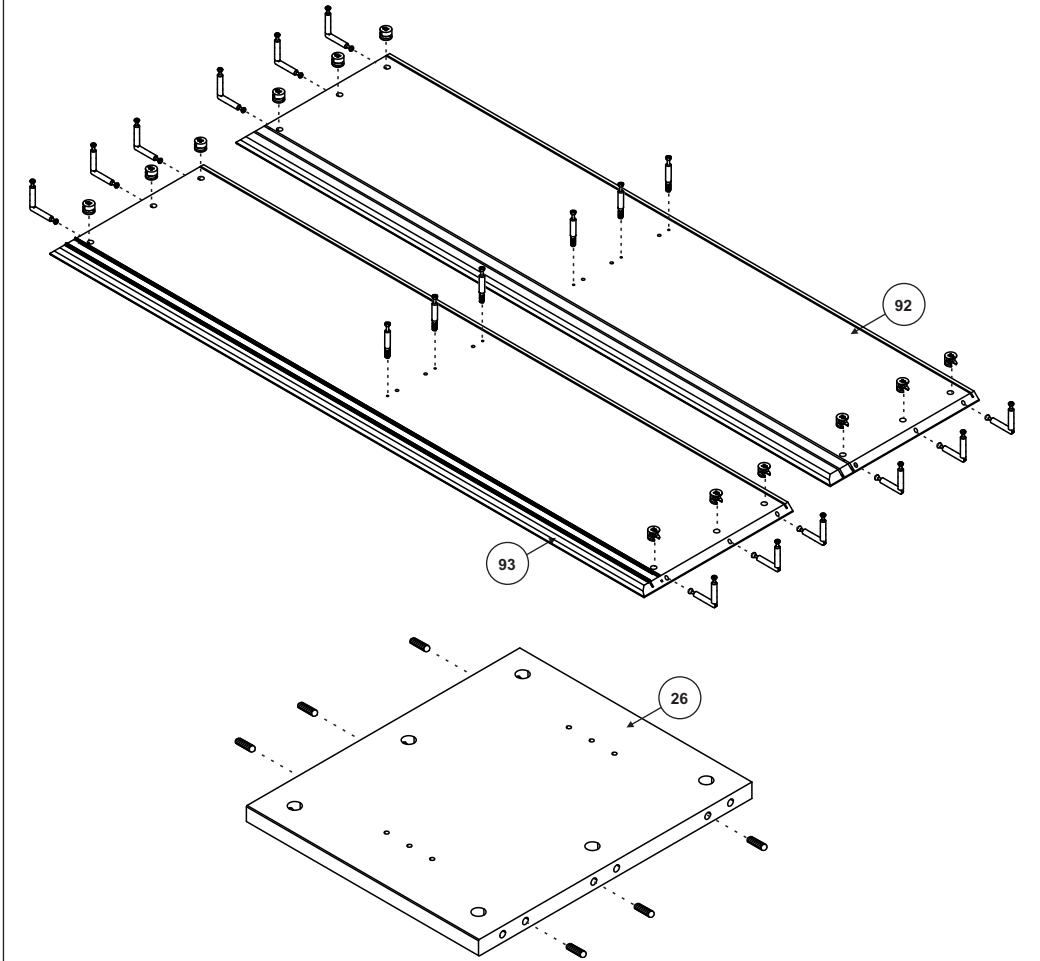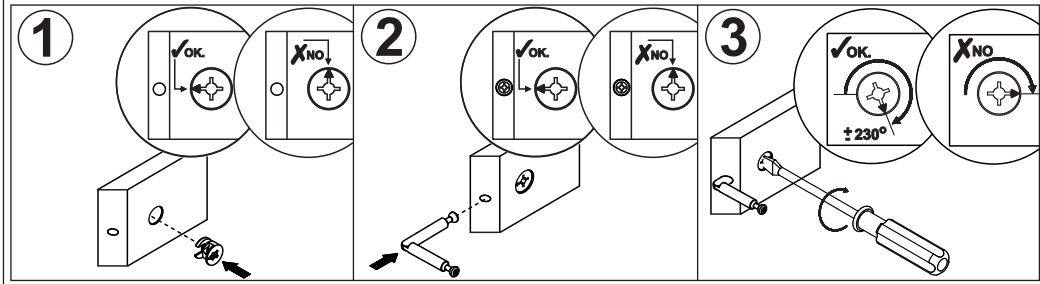

A 8x35 x6	BF x12
BC 34mm x6	CA 15x13,2 x12

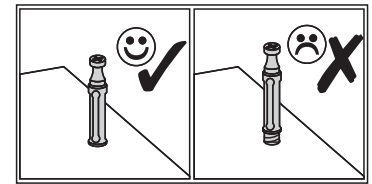

3

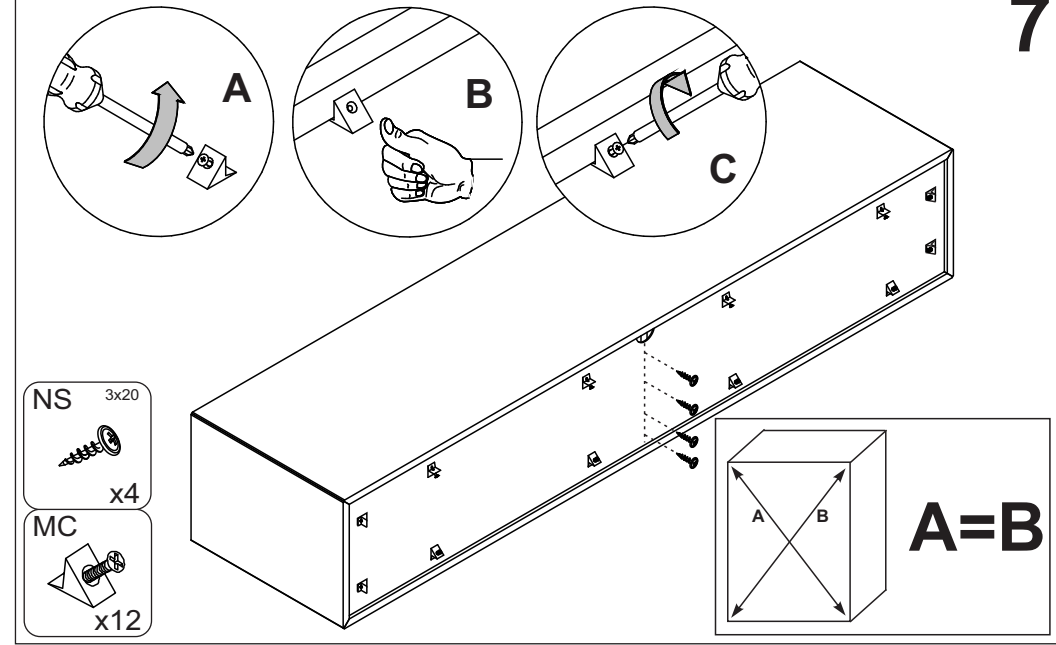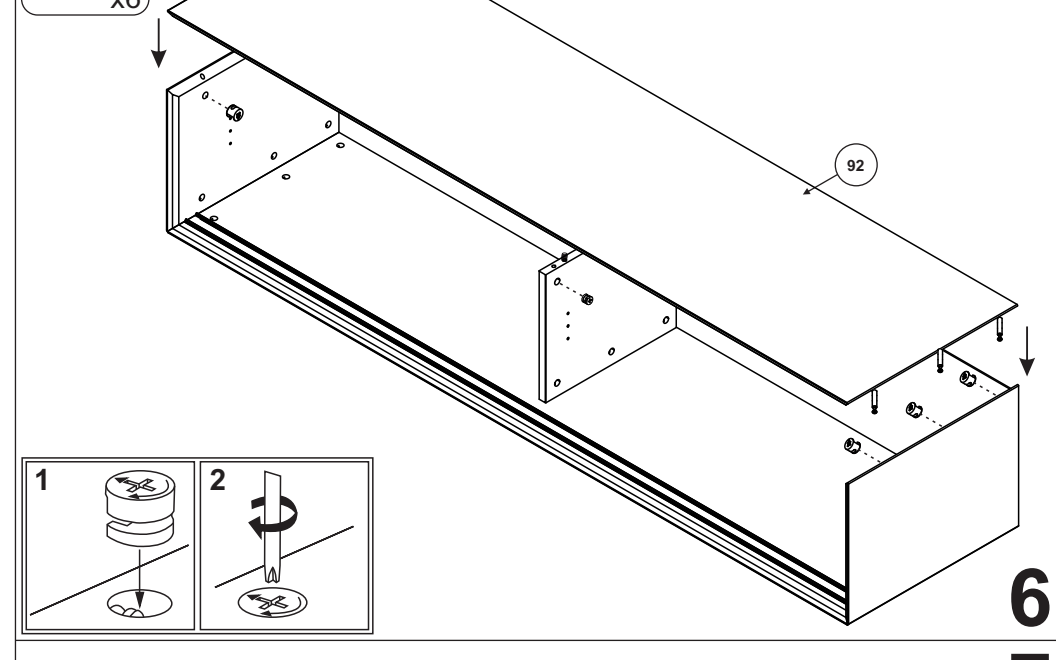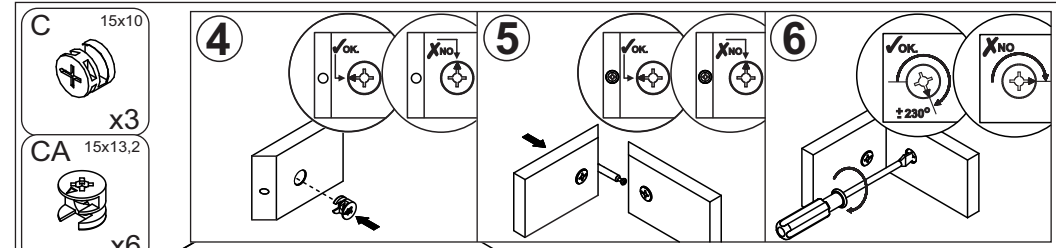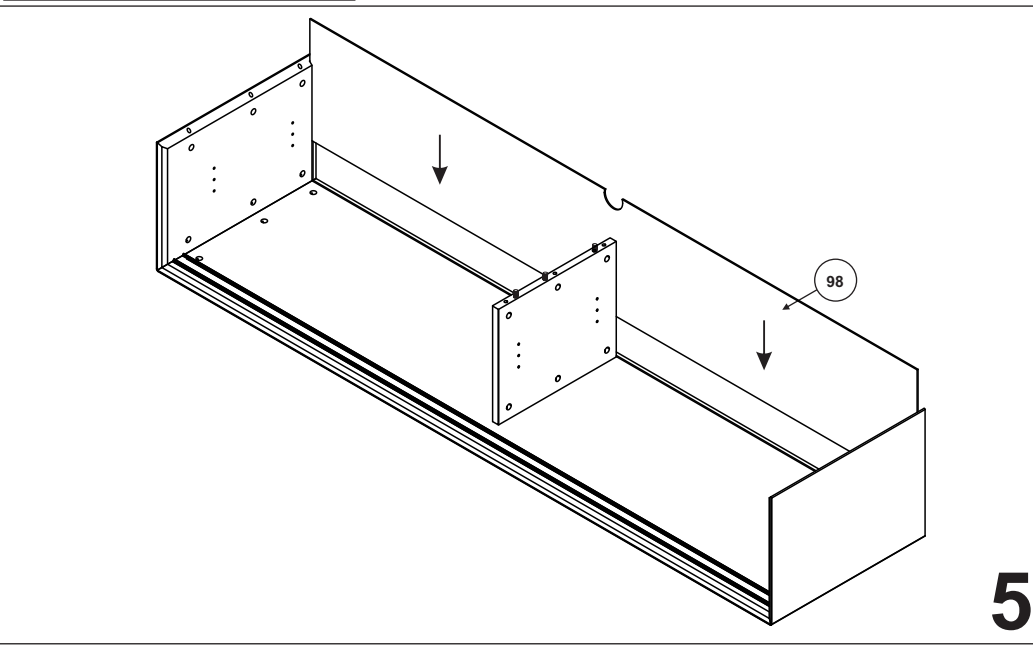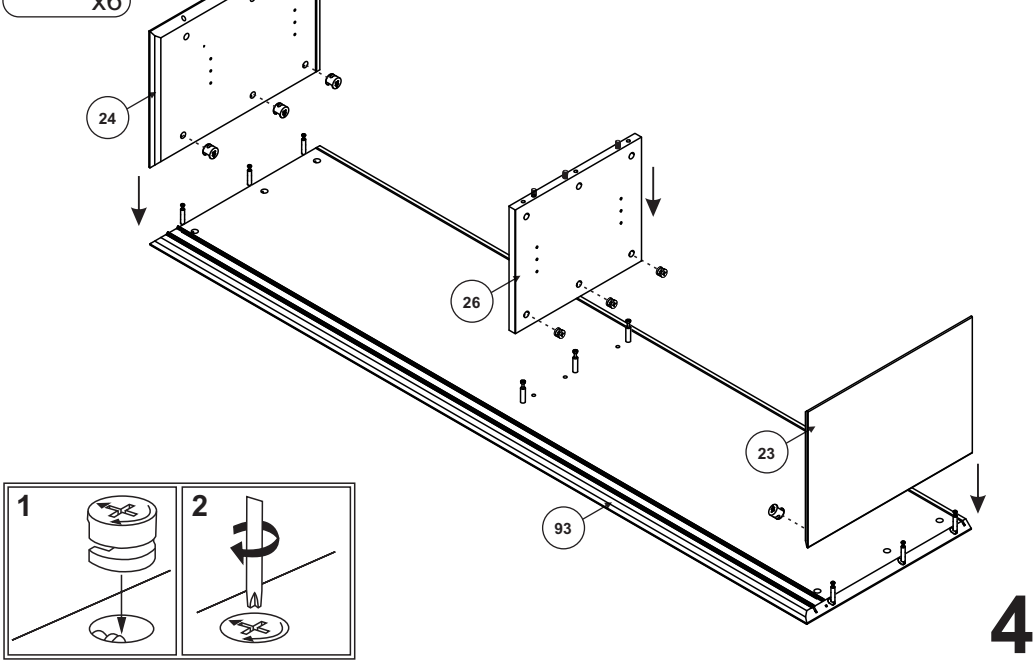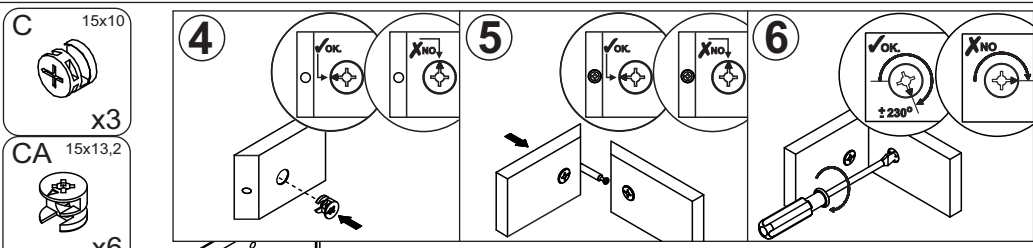

C 15x10  
x3  
CA 15x13,2  
x6

C 15x10  
x3  
CA 15x13,2  
x6

NS 3x20  
x4  
MC  
x12

4

6

7

A=B